 
 

 

 


 





 
 
 



 
 


 
 
 
TRANSFER

PREPARATION


 
 
 
 
 

 
 




SST






 
 
 
 
 
 
 

023G9-01

	09223-00010	Cover & Seal Replacer	TRANSFER ASSY(4WD)
	09223-4601 1	Crankshaft Front Oil Seal Replacer	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09308-00010	Oil Seal Puller	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER CASE OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09316-6001 1	Transmission & Transfer Bearing Replacer	TRANSFER ASSY(4WD)
	(09316-00021)	Replacer "A"	TRANSFER ASSY(4WD)
	(09316-00041)	Replacer "C"	TRANSFER ASSY(4WD)
	(09316-00061)	Replacer "E"	TRANSFER ASSY(4WD)
	09326-2001 1	Output Shaft Bearing Lock Nut Wrench	TRANSFER ASSY(4WD)
	09387-00010	Transfer Oil Seal Replacer	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09387-00090	Senter Differential Sentering Tool	TRANSFER ASSY(4WD)
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	TRANSFER ASSY(4WD)
	09520-01010	Drive Shaft Remover Attachment	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)


	09520-10021	Drive Shaft Remover & Replacer	TRANSFER ASSY(4WD)
	09520-24010	Differential Side Gear Shaft Puller	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	(09520-32040)	Shocker Set	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	09550-60010	Differential Side Bearing Replacer	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	(09951-00380)	Replacer 38	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951-00580)	Replacer 58	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09952-06010)	Adapter	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09556-16030	Differential Drive Pinion Holding Tool 28	TRANSFER ASSY(4WD)
	(09612-10061)	Steering Pinion Bearing Replacer	TRANSFER ASSY(4WD)
	09628-6201 1	Boll Joint Puller	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	09930-00010	Drive Shaft Nut Chisel	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09950-00020	Bearing Remover	TRANSFER ASSY(4WD)
	09950-00030	Bearing Remover Attachment	TRANSFER ASSY(4WD)

PREPARATION - TRANSFER

 
 
 
 

 
 
 
 
	09950-4001 1 Puller B Set	TRANSFER ASSY(4WD)
	(09951-04010) Hanger 150	TRANSFER ASSY(4WD)
	(09952-04010) Slide Arm	TRANSFER ASSY(4WD)
	(09953-04020) Center Bolt 150	TRANSFER ASSY(4WD)
	(09954-04010) Arm 25	TRANSFER ASSY(4WD)
	(09955-04061) Claw No.6	TRANSFER ASSY(4WD)
	(09957-04010) Attachment	TRANSFER ASSY(4WD)
	(09958-0401 1) Holder	TRANSFER ASSY(4WD)
	09950-60010 Replacer Set	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951-00350) Replacer 35	TRANSFER ASSY(4WD)
	(09951-00360) Replacer 36	TRANSFER ASSY(4WD)
	(09951-00380) Replacer 38	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951-00420) Replacer 42	TRANSFER ASSY(4WD)

	(09951-00430) Replacer 43	TRANSFER ASSY(4WD)
	(09951-00560) Replacer 56	TRANSFER ASSY(4WD)
	(09951-00580) Replacer 58	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951-00610) Replacer 61	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951-00620) Replacer 62	TRANSFER ASSY(4WD)
	(09952-06010) Adapter	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09950-60020 Replacer Set No.2	TRANSFER ASSY(4WD)
	(09951-00710) Replacer 71	TRANSFER ASSY(4WD)
	(09951-00750) Replacer 75	TRANSFER ASSY(4WD)
	(09951-00770) Replacer 77	TRANSFER ASSY(4WD)
	(09951-00810) Replacer 81	TRANSFER ASSY(4WD)
	09950-70010 Handle Set	TRANSFER CASE OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09951-07150) Handle 150	TRANSFER CASE OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD) TRANSFER ASSY(4WD)

PREPARATION - TRANSFER

	(09951-07200) Handle 200	TRANSFER ASSY(4WD)
---	--------------------------	--------------------

Recommended Tools

	09011-12301 Socket Wrench 30 mm	TRANSFER RH BEARING RETAINER OIL SEAL(4WD)
	09040-0001 1 Hexagon Wrench Set	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	(09043-20060) Socket Hexagon Wrench 6	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	(09043-20060) Socket Hexagon Wrench 6	TRANSFER RH BEARING RETAINER OIL SEAL(4WD) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(4WD)
	09090-04020 Engine Sling Device	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09904-00010 Expander Set	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	(09904-00020) No. 1 Claw	TRANSFER CASE OIL SEAL(4WD) TRANSFER ASSY(4WD)
	09905-00013 Snap Ring Pliers	TRANSFER ASSY(4WD)
	(09904-00090) Claw Set	TRANSFER ASSY(4WD)

SSM

	08826-00090 "Seal Packing 1281," THREE BOND 1281 or equivalent (FIPG)	TRANSFER ASSY(4WD)
--	---	--------------------

Equipment

Torque wrench	
Dial gauge with magnetic base	Transfer assy(4WD)
V-block	Transfer assy(4WD)
Hexagon wrench (6 mm)	

Lubricant

Item	Capacity	Classification
Transfer oil	0.9 liters (0.95 US qts, 0.71 Imp.qts)	Hypoid gear oil SAE 90 (GL-5)