 
 





 

 
 
 


# DRIVE SHAFT / PROPELLER SHAFT

 

 
 


 
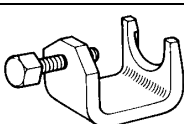 
 

 
 

## PREPARATION

 
 

 
 
 
 
 

 
 

 
023GF-01

### SST




 

	09240-00020	Wire Gauge Set	FRONT DRIVE SHAFT REAR DRIVE SHAFT(4WD)
	09316-6001 1	Transmission & Transfer Bearing Replacer	FRONT AXLE HUB SUB-ASSY LH
	(09316-0001 1)	Replacer Pipe	FRONT AXLE HUB SUB-ASSY LH
	(09316-00031)	Replacer "B"	FRONT AXLE HUB SUB-ASSY LH
	09325-20010	Transmission Oil Plug	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	09330-00021	Companion Flange Holding Tool	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	09370-50010	Drive Line Angle Gauge	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	09520-00031	Rear Axle Shaft Puller	FRONT AXLE HUB SUB-ASSY LH
	09520-01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT
	09520-24010	Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT
	(09520-32040)	Shocker Set	FRONT DRIVE SHAFT
	09521-24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT REAR DRIVE SHAFT(4WD)

## PREPARATION - DRIVE SHAFT / PROPELLER SHAFT

 
 
 
 
 


	09527-1001 1	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT
	09527-1701 1	Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB-ASSY LH
	09527-2101 1	Rear Axle Shaft Bearing Remover	REAR DRIVE SHAFT(4WD)
	09608-16042	Front Hub Bearing Adjusting Tool	FRONT DRIVE SHAFT
	(09608-02021)	Bolt & Nut	FRONT DRIVE SHAFT
	(09608-02041)	Retainer	FRONT DRIVE SHAFT
	09608-32010	Steering Knuckle Oil Seal Replacer	FRONT AXLE HUB SUB-ASSY LH
	09628-1001 1	Ball Joint Puller	FRONT AXLE LH HUB BOLT REAR AXLE LH HUB BOLT
	09628-6201 1	Ball Joint Puller	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT
	09710-04081	Base	FRONT DRIVE SHAFT
	09710-30021	Suspension Bushing Tool Set	FRONT DRIVE SHAFT
	(09710-03141)	Bushing Remover Base	FRONT DRIVE SHAFT
	09726-40010	Lower Control Shaft Bearing Replacer	FRONT DRIVE SHAFT

 
	09930-00010 Drive Shaft Nut Chisel	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT REAR DRIVE SHAFT(4WD) REAR AXLE CARRIER SUB-ASSY LH(4WD) REAR AXLE HUB & BEARING ASSY LH(4WD)
	09950-00020 Bearing Remover	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT REAR DRIVE SHAFT(4WD)
	09950-4001 1 Puller B Set	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09951-04020) Hanger 200	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09952-04010) Slide Arm	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09953-04030) Center Bolt 200	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09954-04010) Arm 25	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09955-04061) Claw No.6	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09957-04010) Attachment	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	(09958-0401 1) Holder	PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	09950-60010 Replacer Set	FRONT AXLE HUB SUB-ASSY LH
	(09951-00430) Replacer 43	FRONT AXLE HUB SUB-ASSY LH
	09950-60020 Replacer Set No.2	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT

## PREPARATION - DRIVE SHAFT / PROPELLER SHAFT

	(09951-00710) Replacer 71	FRONT DRIVE SHAFT
	(09951-00750) Replacer 75	FRONT AXLE HUB SUB-ASSY LH
	(09951-00810) Replacer 81	FRONT AXLE HUB SUB-ASSY LH
	09950-70010 Handle Set	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT
	(09951-07100) Handle 100	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT

## Recommended Tools

	09011-12301 Socket Wrench 30 mm	FRONT AXLE HUB SUB-ASSY LH FRONT DRIVE SHAFT REAR DRIVE SHAFT(4WD) REAR AXLE CARRIER SUB-ASSY LH(4WD) REAR AXLE HUB & BEARING ASSY LH(4WD)
	09040-0001 1 Hexagon Wrench Set	FRONT DRIVE SHAFT PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	09042-00010 Torx Socket T30	FRONT AXLE HUB SUB-ASSY LH
	(09043-20060) Socket Hexagon Wrench 6	FRONT DRIVE SHAFT PROPELLER W/CENTER BEARING SHAFT ASSY(4WD)
	09904-00010 Expander Set	REAR DRIVE SHAFT(4WD)
	(09904-00050) No. 4 Claw	REAR DRIVE SHAFT(4WD)
	09905-00012 Snap Ring No.1 Expander	FRONT DRIVE SHAFT

	09905-00013 Snap Ring Pliers	FRONT AXLE HUB SUB-ASSY LH
---	------------------------------	----------------------------

## Equipment

Torque wrench	
Dial gauge with magnetic base	
Dial indicator	
Alignment tester	
Toe-in gauge	

## Lubricant

Item	Capacity
Front drive shaft 3MZ-FE (FF)  Except 3MZ-FE (FF)	Outboard joint grease 205 to 225 g (7.2 to 8.0 oz.) Inboard joint grease 155 to 175 g (5.5 to 6.2 oz.) Outboard joint grease 190 to 200 g (6.7 to 7.0 oz.) Inboard joint grease 175 to 155 g (6.2 to 6.5 oz.)
Rear drive shaft	Outboard joint grease 95 to 105 g (3.4 to 3.7 oz.) Inboard joint grease 125.5 to 135.5 g (4.4 to 4.7 oz.)