

## TORQUE SPECIFICATION

Part Tightened		N·m	kgf·cm	ft·lbf
Park/neutral position switch	Nut	6.9	70	61 in.·lbf
	Bolt	5.4	55	48 in.·lbf
Control shaft lever x Control shaft		13	130	9
Shift control cable x Control shaft lever		13	130	9
Transaxle housing x Engine block	A bolt	64	653	47
	B bolt	46	470	34
	C bolt	37	377	27
Torque converter clutch x Drive plate		48	489	35
Flywheel housing under cover x Automatic transaxle		7.8	80	69 in.·lbf
Engine mounting bracket FR x Transaxle		64	653	47
Oil filler tube x Transaxle		5.5	56	49 in.·lbf
Control cable bracket No.1 x Transaxle		12	122	9
Control cable bracket No.2 x Transaxle		12	122	9
Oil cooler tube clamp x Control cable bracket		5.4	55	48 in.·lbf
Oil cooler inlet tube x Transaxle		34	347	25
Oil cooler outlet tube x Transaxle		34	347	25
Starter x Transaxle		37	377	27
Starter wire x Starter		9.8	100	87 in.·lbf
Wire harness x Transaxle		13	133	10
Wire harness clamp x Transaxle		8.4	86	74 in.·lbf
Speed sensor (NC) x Transaxle		11	115	8
Speed sensor (NT) x Transaxle		11	112	8
Air cleaner x Air cleaner hose		5.0	51	44 in.·lbf
Drain plug x Oil pan		49	500	36
Transmission wire x Transaxle		5.4	55	48 in.·lbf
ATF temperature sensor x Valve body		6.6	67	58 in.·lbf
Oil pan x Transaxle		7.8	80	69 in.·lbf
Solenoid valve x Valve body	A B bolt	11	110	8
	C D bolt	6.6	67	58 in.·lbf
Valve body x Transaxle		11	110	8
Oil strainer x Valve body		11	110	8
Floor shift assy x Body		12	120	9
Control cable x Body		4.9	50	43 in.·lbf
Transfer x Transaxle (U151F)		78	800	58
Transfer x Transfer stiffener plate RH (U151F)		34	350	25
Engine mount bracket RR x Transfer stiffener, plate RH		34	350	25
Oil cooler assy x Body	Nut bolt	7.0	71	62 in.·lbf