

CD CANNOT BE EJECTED

INSPECTION PROCEDURE

1 PRESS "EJECT" AND CHECK OPERATION

(a) Press "EJECT" and check the operation.

- (1) Press the CD EJECT switch of the radio receiver assembly for 2 seconds or more to see if the CD is ejected.

OK: CD is ejected.

Reference:

If the CD is not ejected, bring the vehicle in for repair.

Do not attempt to remove it by force.

NG

**REPLACE RADIO RECEIVER ASSY
(SEE PAGE 67-6)**

OK

2 CHECK IF A PROPER CD IS INSERTED

(a) Check that a normal audio CD is inserted.

- (1) Check in what conditions the sound skipping occurs.

OK: Driving on a bad road.

NG

**REPLACE RADIO RECEIVER ASSY
(SEE PAGE 67-6)**

OK

3 REPLACE CD WITH ANOTHER AND RECHECK

(a) Replace the CD with another and recheck.

- (1) Check the installation condition of the radio receiver assembly.

OK: Installed properly.

NG

**REPLACE RADIO RECEIVER ASSY
(SEE PAGE 67-6)**

OK

CD FAULTY