

HOW TO PROCEED WITH TROUBLESHOOTING

1 VEHICLE BROUGHT TO WORKSHOP

 


2 CUSTOMER PROBLEM ANALYSIS (SEE PAGE 05-1617)




3 BASIC INSPECTION

- (a) Basic inspection.
- (1) Check the battery voltage.
Standard: 11 to 14 V
- (b) Check the power supply to the radio receiver assy.
- (1) Turn the ignition switch to the ACC position.
- (2) Check whether or not the display appears on the radio receiver assy.

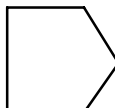

 DISPLAY DOES NOT APPEAR (PROCEED TO PROBLEM SYMPTOM TABLE) (SEE PAGE 05-1632)

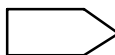

DISPLAY APPEARS (GO TO STEP 4)

 
4 DTC CHECK (SEE PAGE 05-1618)

HINT:

If the audio system is equipped with a multi-display, check DTCs in the NAVIGATION SYSTEM section(see page 05-1757).




DTC IS OUTPUT (GO TO STEP 9)

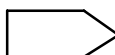

DTC IS NOT OUTPUT (GO TO STEP 10)

 5 DTC CHART (SEE PAGE 05-1624)

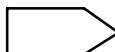

GO TO STEP 12

6 PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1632)



7 CIRCUIT INSPECTION AND PART INSPECTION (SEE PAGE 05-1634 - 05-1688)



8 IDENTIFICATION OF PROBLEM



9	CONFIRMATION TEST
---	-------------------



END
