

PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and perform a troubleshooting for each circuit.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Symptom	Suspected Area	See Page
Theft deterrent system cannot be set.	1. Indicator lamp circuit 2. ECU power source circuit 3. Key un-lock warning switch circuit 4. Back door key lock and unlock switch circuit 5. Engine hood courtesy switch circuit 6. Theft warning ECU	05-2024 05-2026 05-2033 05-2036 05-2038 -
Indicator lamp does not blink when theft deterrent system is set.	1. Indicator lamp circuit	05-2024
When theft deterrent system is set (System does not operate when the engine hood is opened).	1. Engine hood courtesy switch circuit 2. Theft warning ECU	05-2038 -
When theft deterrent system is set (It is not canceled when the ignition key is turned to ACC or ON position).	1. Ignition switch circuit	05-2031
When theft deterrent system is set (It is still operating when back door is opened with key).	1. Back door key lock and un-lock switch circuit	05-2036
While theft deterrent system is in warning operation (Horns do not sound).	1. Horn circuit	05-2028
Even when theft deterrent system is not set (Horns sound).	1. Horn circuit	05-2028