

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below (Proceed to the page given for that circuit).

DTC No. (See Page)	Detection Item	Trouble Area	Open Door Warning Light
42 (05-1968)	Wireless door lock receiver circuit malfunctions	<ul style="list-style-type: none">• Wire harness• Wireless door lock receiver• Body ECU	Blinks