

<b>DTC</b>	<b>B1221/21</b>	<b>POWER WINDOW SWITCH CIRCUIT ON DRIVER DOOR</b>
------------	-----------------	---

## CIRCUIT DESCRIPTION

This DTC is output when any switch of the power window regulator master switch assy (door ECU) is ON.

DTC No.	DTC Detecting Condition	Trouble Area
B1221/21	Any switch of the power window regulator master switch is ON	Power window regulator master switch assy (door ECU)

## INSPECTION PROCEDURE

<b>1</b>	<b>CHECK POWER WINDOW REGULATOR MASTER SWITCH ASSY</b>
----------	--

(a) Check if code B1221/21 will disappear but only B1211/11 (communication stop) will be output when the master switch connector is disconnected.

- (1) B1221/21 code output, proceed to A.
- (2) B1211/11 code output, proceed to B.

**B****REPLACE POWER WINDOW REGULATOR MASTER SWITCH ASSY****A****REPLACE MULTIPLEX NETWORK BODY ECU**