

# POWER WINDOW CONTROL SYSTEM

0523D-02

## PRECAUTION

### 1. NOTICES OF INSPECTION WITH REMOVAL AND INSTALLATION PROCEDURES

- (a) Before performing operations related to the front door lock assy RH and door lock cylinder, disconnect the battery terminal or the connectors of the power window regulator master switch assy.

#### **CAUTION:**

**If the operation is performed with the connectors being connected, the door control switch (inter-locked with key) inside the door lock might be unexpectedly actuated, which results in injury.**