

DIAGNOSTIC TROUBLE CODE CHART

HINT:

- Using SST 09843-18040, connect terminals TC and CG of the DLC3.
- If a trouble code is displayed during the DTC check, check the circuit listed for that code. For details of each code, refer to the "See page" under respective "DTC No." in the DTC chart.

DTC No. (See Page)	Circuit Inspection	Trouble Area
P0500/21 (05-2154)	Vehicle Speed Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Vehicle speed sensor • Vehicle speed sensor signal circuit • ECM
P0503/23 (05-2154)	Vehicle Speed Sensor Circuit Malfunction	<ul style="list-style-type: none"> • Vehicle speed sensor • Vehicle speed sensor signal circuit • ECM
P0571/52 (05-2155)	Stop Light Switch Circuit Malfunction	<ul style="list-style-type: none"> • Stop lamp switch assy • Stop lamp switch assy circuit • ECM
P0607/54 (05-2159)	Input Signal Circuit Malfunction	<ul style="list-style-type: none"> • ECM