

ABS SYSTEM MALFUNCTION

CIRCUIT DESCRIPTION

The skid control ECU outputs DTCs when a speed sensor malfunction occurs or there is an open in the stop lamp switch assy circuit of the ABS system. If ABS system has a malfunction, tire pressure warning system will not function.

INSPECTION PROCEDURE

1	CHECK DIAGNOSTIC TROUBLE CODE OUTPUT
---	---

- (a) Check that the normal code is output by ABS system (see page [05-765](#)).

OK:

DTC is not output.

NG

REPAIR CIRCUIT INDICATED BY OUTPUT CODE

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE [05-740](#))**