

TIRE PRESSURE WARNING LAMP CIRCUIT


CIRCUIT DESCRIPTION

When the tire pressure decreases, the skid control ECU illuminates the tire pressure warning lamp on the combination meter assy.

HINT:

Refer to the "TIRE PRESSURE WARNING LAMP CHART" section in the "DIAGNOSIS SYSTEM" for the tire pressure warning lamp (see page 05-744).

WIRING DIAGRAM

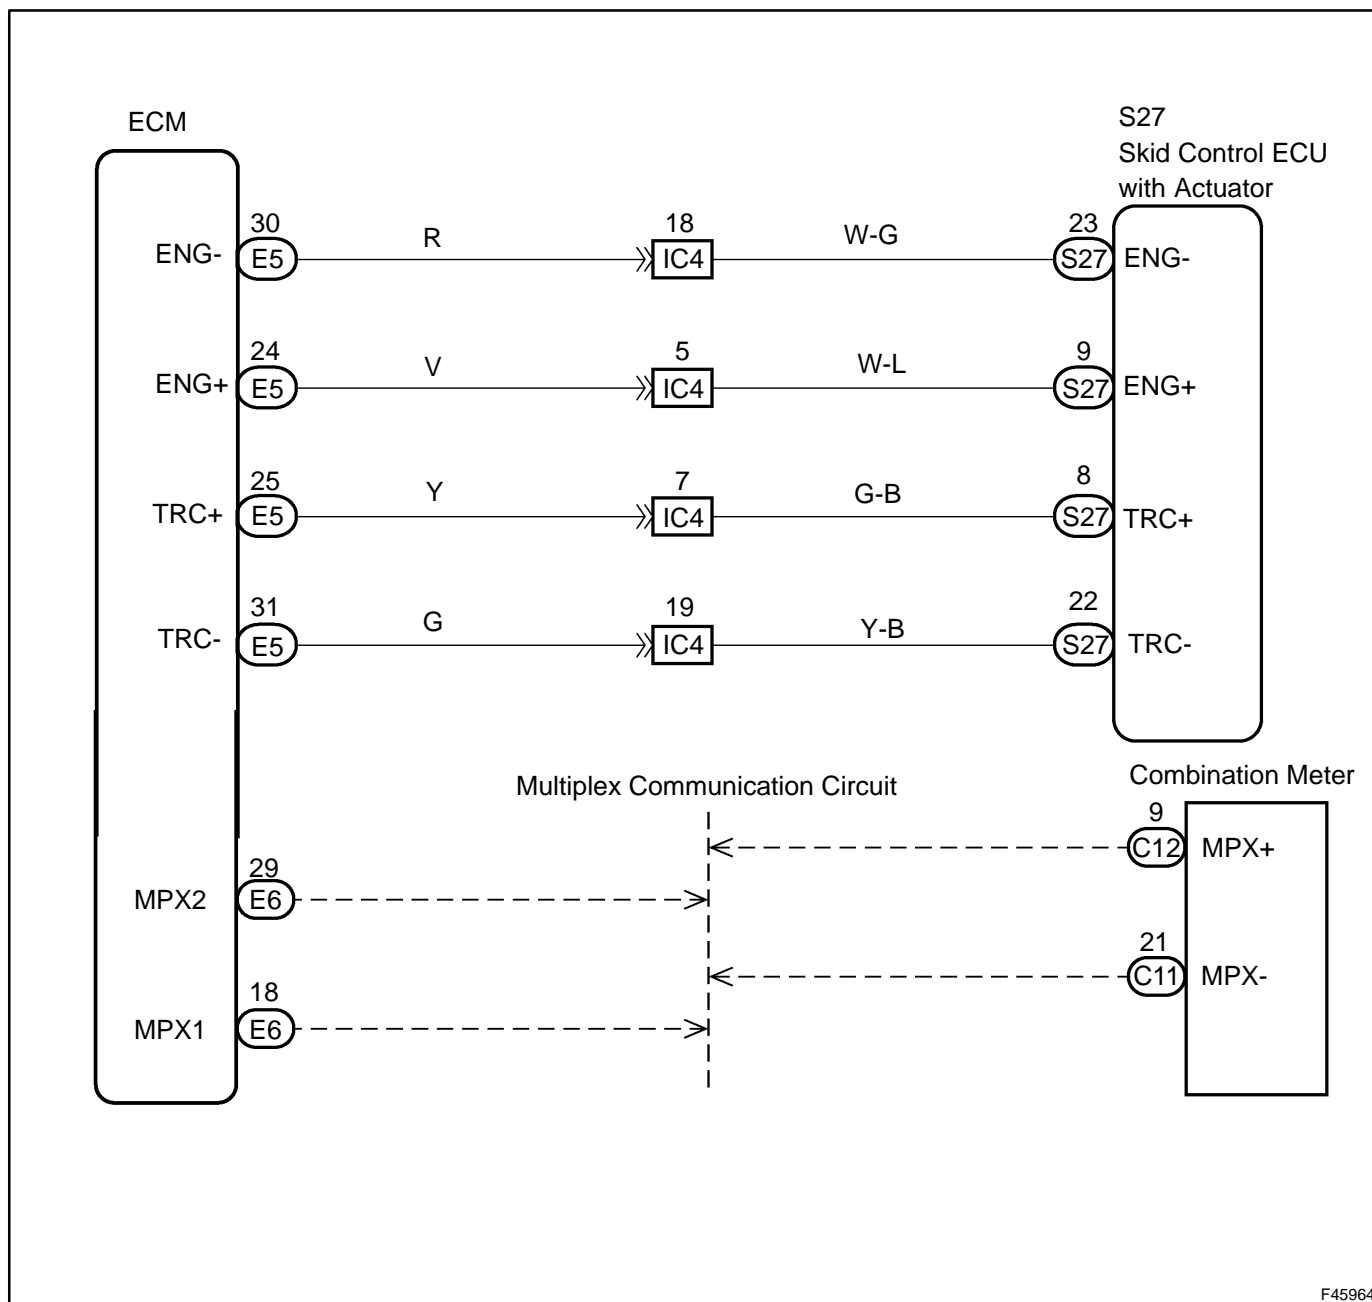

F45964

INSPECTION PROCEDURE

1 INSPECT COMBINATION METER ASSY(TIRE PRESSURE WARNING LAMP)

- (a) Turn the ignition switch to the ON position.
- (b) Check the tire pressure warning lamp.

OK:

Tire pressure warning lamp comes on for 3 or 4 seconds.

NG

**REPLACE COMBINATION METER ASSY
(SEE PAGE 71-18)**

OK

2 CHECK DIAGNOSTIC CODE OUTPUT

- (a) Check if the normal code is output by SFI system (see page 05-38 or 05-400).

OK:

No DTC output from SFI system.

NG

**REPAIR CIRCUIT INDICATED BY OUTPUT
CODE**

OK

3 CHECK DIAGNOSTIC CODE OUTPUT

- (a) Check if the normal code is output by VSC system (see page 05-765).

OK:

No DTC output from VSC system.

NG

**REPAIR CIRCUIT INDICATED BY OUTPUT
CODE**

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-740)**