



TEST MODE PROCEDURE

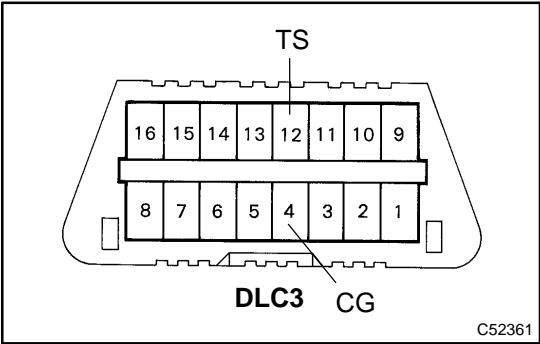

1. **TEST MODE (USING SST CHECK WIRE)**
- (a) Make sure the ignition switch off.
 - (b) Using SST, connect terminals TS and CG of the DLC3.
SST 09843-18040
 - (c) Turn the ignition switch to the ON position.

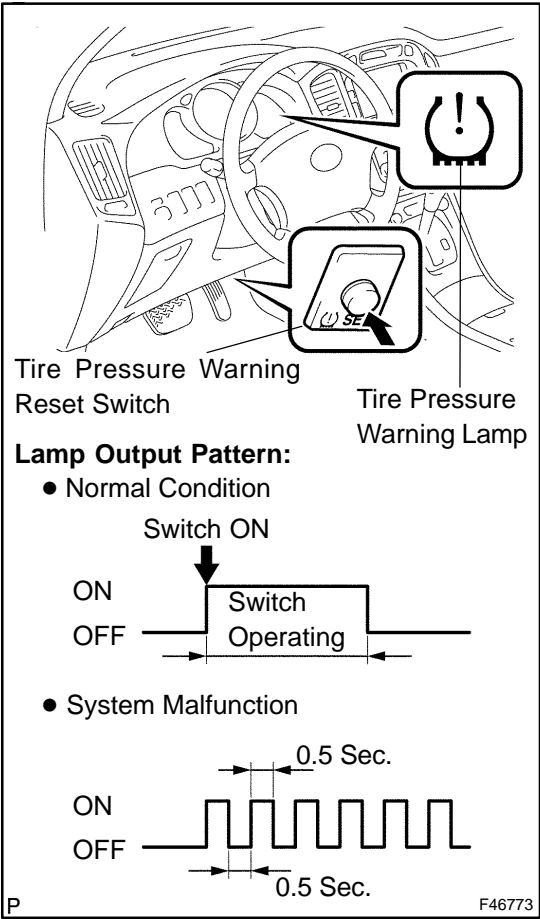


- (d) Press the tire pressure warning reset switch.
 - (e) Check that the tire pressure warning lamp comes on.
- HINT:
- Unless (d) above is done, the tire pressure warning lamp remains off while in test mode.
 - When there is a problem with the tire pressure warning system, the tire pressure warning lamp blinks at 0.5 second intervals.


If the lamp output result is not normal, proceed to the problem symptoms table or TS terminal circuit.

Item	See page
Problem symptoms table	05-740
TS and CG terminal circuit	05-873

- (f) Turn the ignition switch off.
- (g) Remove the SST from the DLC3.
SST 09843-18040

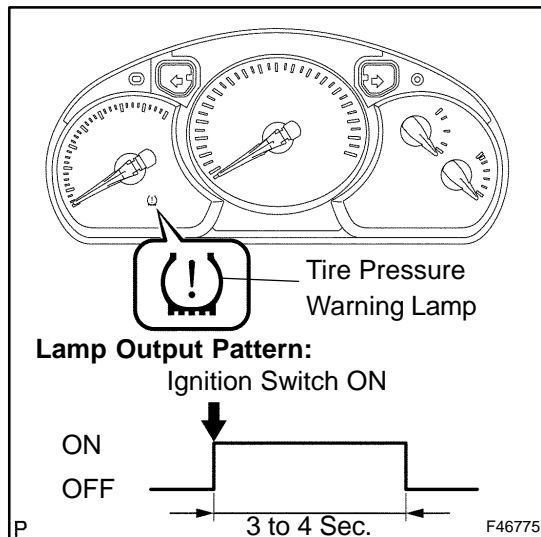


- (h) Turn the ignition switch to the ON position.
- (i) Check that the tire pressure warning lamp goes off.
- (j) Initialize the tire pressure warning system (see page 05-736).

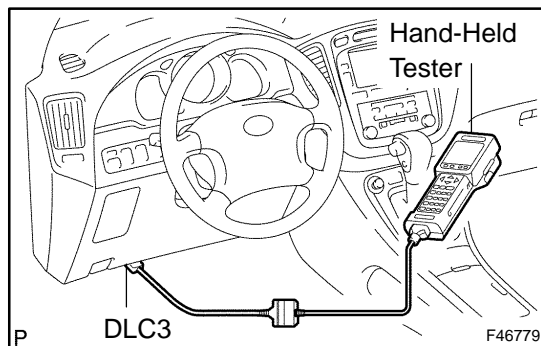

2. TEST MODE (USING THE HAND-HELD TESTER)

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch to the ON position.
- (c) Select "SIGNAL CHECK", and proceed checking with the hand-held tester.

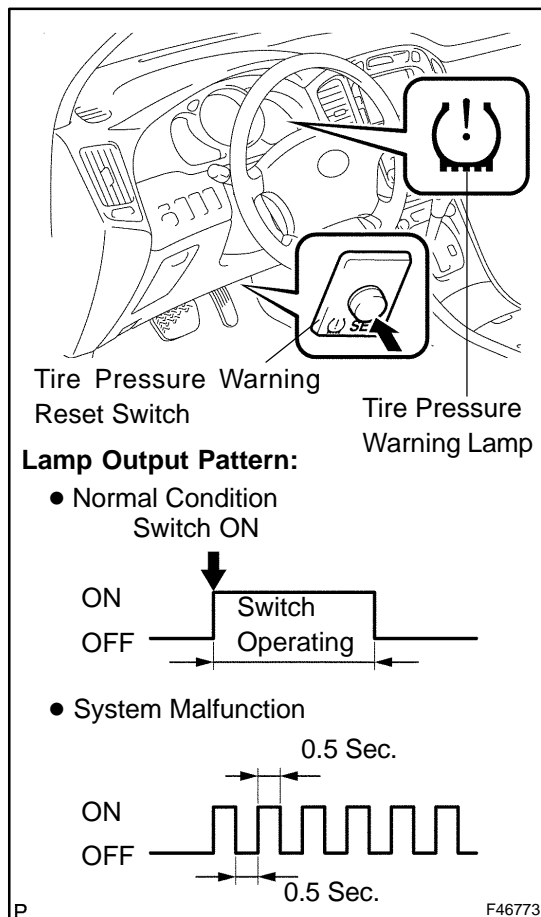


- (d) Press the tire pressure warning reset switch.
- (e) Check that the tire pressure warning lamp comes on.

HINT:

- Unless (d) above is done, the tire pressure warning lamp remains off while in test mode.
- When there is a problem with the tire pressure warning system, the tire pressure warning lamp blinks at 0.5 second intervals.

If the lamp output result is not normal, proceed to the problem symptoms table (see page 05-740).

- (f) Turn the ignition switch off.

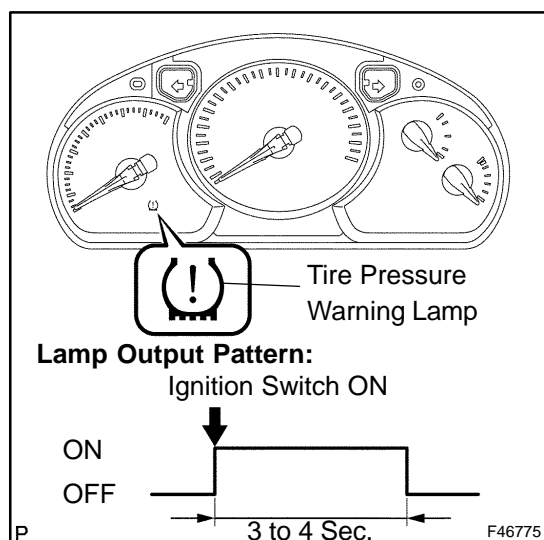

- (g) Turn the ignition switch to the ON position.
- (h) Check that the tire pressure warning lamp goes off.
- (i) Initialize the tire pressure warning system (see page [05-736](#)).