

HOW TO PROCEED WITH TROUBLESHOOTING

The hand-held tester can be used at steps 3, 6 and 9.

1 VEHICLE BROUGHT TO WORKSHOP

 


2 CUSTOMER PROBLEM ANALYSIS (SEE PAGE 05-735)

 


3 CHECK MULTIPLEX COMMUNICATION SYSTEM (SEE PAGE 05-2040)

(a) Check that DTC is output.

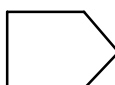

DTC IS OUTPUT (PROCEED TO "MULTIPLEX COMMUNICATION SYSTEM")

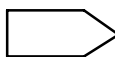

DTC IS NOT OUTPUT (Go to step 4)

4 CHECK TIRE PRESSURE WARNING LAMP CONDITION

- (a) Turn the ignition switch to the ON position.
- (b) Record the condition of the tire pressure warning lamp on the combination meter assy.
- (c) Refer to the "TIRE PRESSURE WARNING LAMP CHART" section of the DIAGNOSIS SYSTEM for checking the condition of the tire pressure warning lamp (see page 05-744).



5 PROBLEM SYMPTOMS TABLE (SEE PAGE 05-740)



6 CIRCUIT INSPECTION (SEE PAGE 05-748 to 05-756)



7 IDENTIFICATION OF PROBLEM



8 REPAIR



9 CONFIRMATION TEST



END