


SYSTEM DIAGRAM

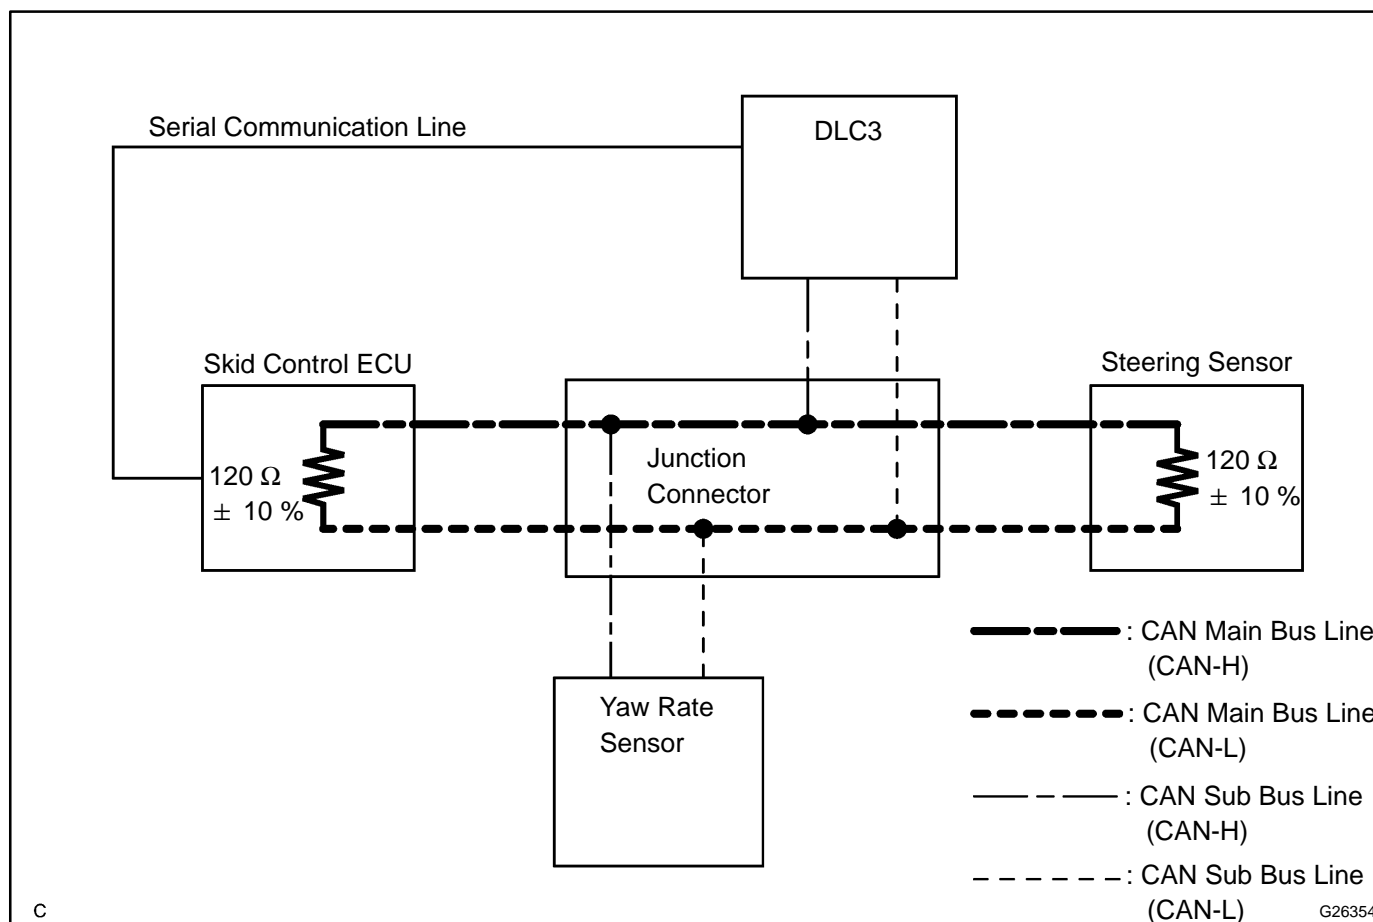

HINT:

The Skid Control ECU stores DTCs and performs DTC communication by receiving information from the Steering Sensor and Yaw Rate Sensor. These sensors cannot store DTCs or perform DTC communication.