

<b>DTC</b>	<b>C1201/51</b>	<b>ENGINE CONTROL SYSTEM MALFUNCTION</b>
------------	-----------------	--

## CIRCUIT DESCRIPTION

If trouble occurs in the engine control system, the skid control ECU prohibits TRAC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201/51	At the engine speed of 500 rpm, a trouble signal in the engine control system continues for 5 secs. or more.	Engine control system

## INSPECTION PROCEDURE

<b>1</b>	<b>CHECK DTC FOR ENGINE</b>
----------	-----------------------------

(a) Check if the normal code is recorded for SFI system.

A	Normal System Code
B	Trouble Code

**B**

**REPAIR ENGINE CONTROL SYSTEM  
ACCORDING TO DTC OUTPUT**

**A**

**REPLACE ECM**