

PROBLEM SYMPTOMS TABLE

Problem Symptom	Suspected Area	See Page
Engine does not start	1. Key	05-2003
		05-2004
		05-2005
		05-2006
	2. Transponder key amplifier	05-2009
		05-2001
		05-2006
		05-2010
	3. Transponder key ECU assy	05-1998
		05-2001
		05-2006
		05-2009
		05-2010