

<b>DTC</b>	<b>B0115/47</b>	<b>SHORT IN SIDE SQUIB (LH) CIRCUIT</b>
------------	-----------------	---

## CIRCUIT DESCRIPTION


The side squib LH circuit consists of the airbag sensor assy center and the separate type front seat back assy (side squib LH).

This circuit instructs the SRS to deploy when deployment conditions are met.


DTC B0115/47 is recorded when a short circuit is detected in the side squib LH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0115/47	<ul style="list-style-type: none"> <li>• Short circuit between SFL+ wire harness and SFL- wire harness of side squib LH</li> <li>• Side squib (LH) malfunction</li> <li>• Airbag sensor assy center malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Separate type front seat back assy (Side squib LH)</li> <li>• Airbag sensor assy center</li> <li>• Floor wire No.2</li> </ul>

## WIRING DIAGRAM

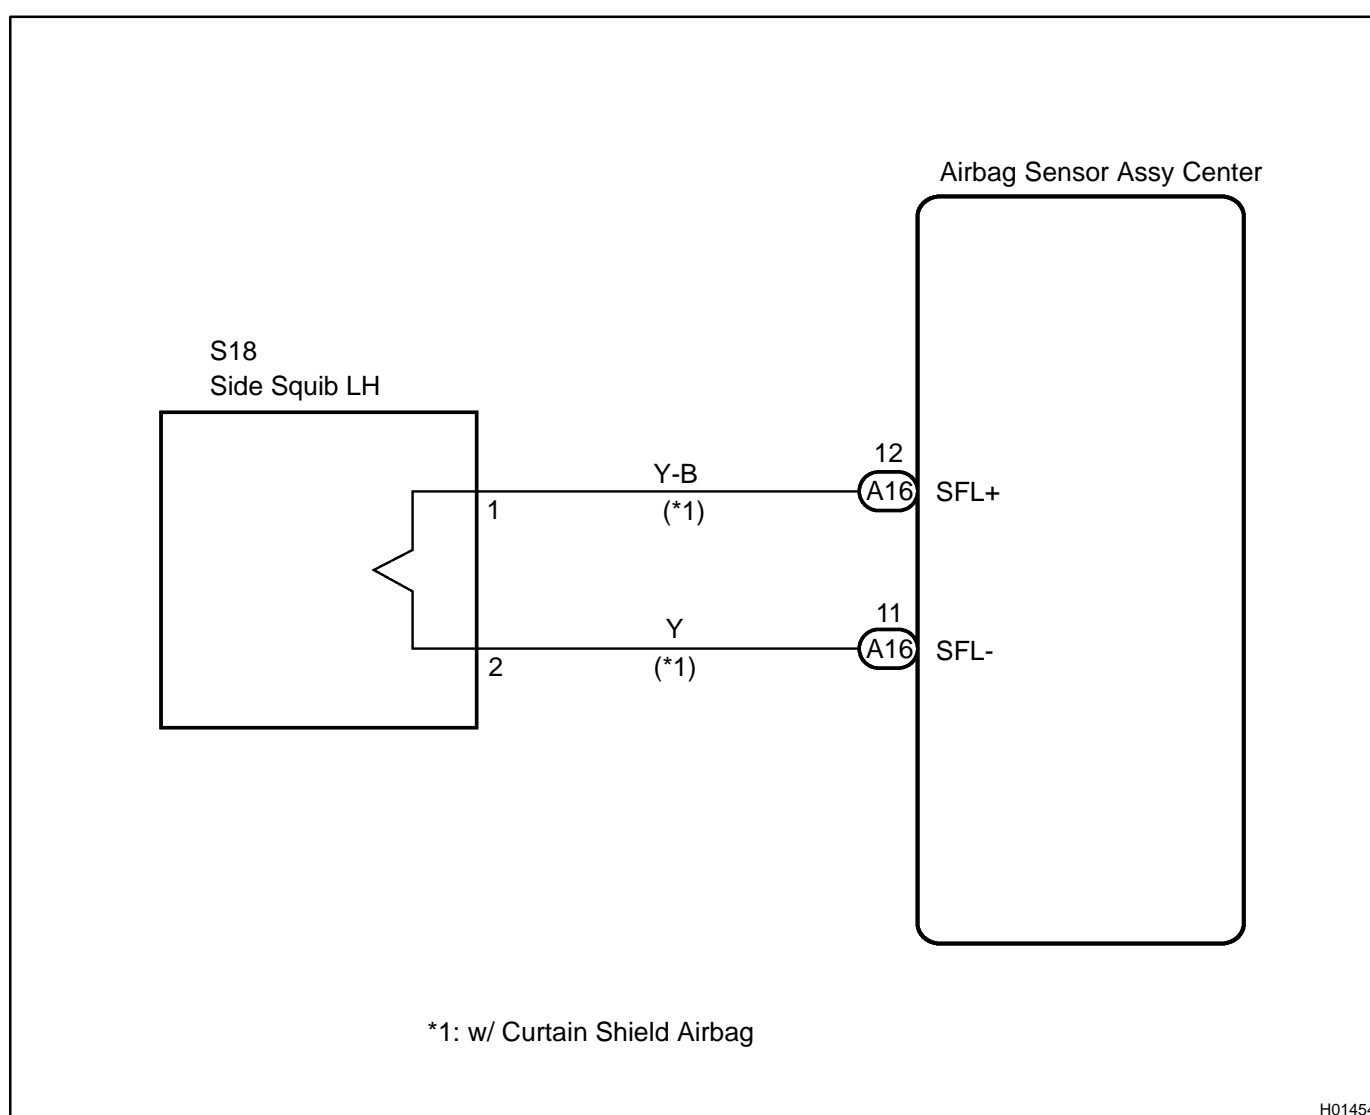


## INSPECTION PROCEDURE

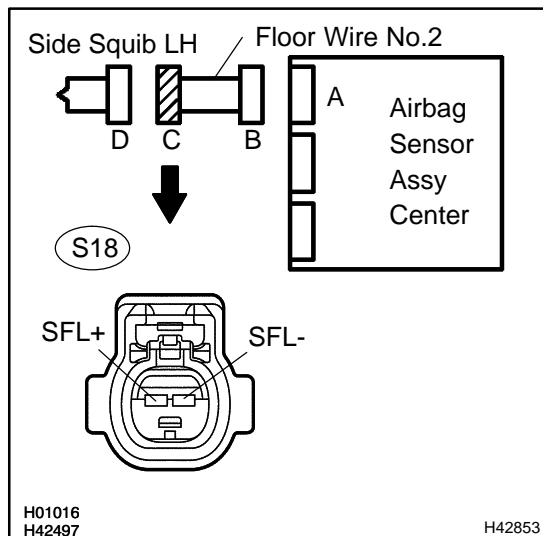**1 CHECK FLOOR WIRE NO.2(SIDE SQUIB LH CIRCUIT)**

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the connectors from the airbag sensor assy center and the separate type front seat back assy (side squib LH).
- Release the activation prevention mechanism built into connector "B" (see page 05-1207 ).
- Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified condition
S18-1 (SFL+) - S18-2 (SFL-)	Always	1 MΩ or Higher

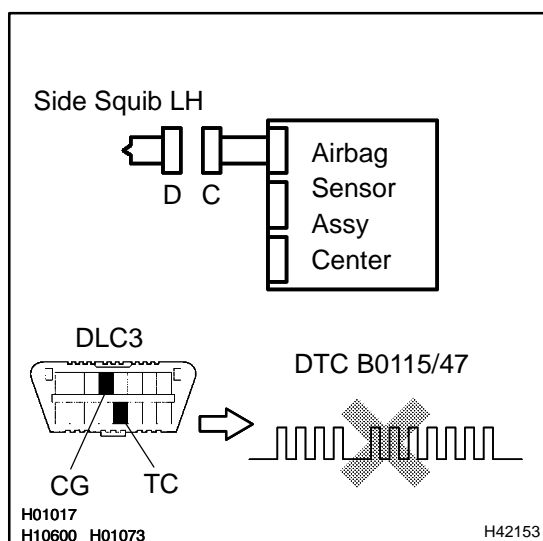**NG****REPAIR OR REPLACE FLOOR WIRE NO.2****OK****2 CHECK AIR BAG SENSOR ASSY CENTER**


- Connect the connector to the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (see page 05-1215 ).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (see page 05-1215 ).

**OK:****DTC B0115/47 is not output.****HINT:**

Codes other than code B0115/47 may be output at this time, but they are not related to this check.

**NG****REPLACE AIR BAG SENSOR ASSY CENTER (SEE PAGE 60-53 )****OK**

### 3 CHECK SEPARATE TYPE FRONT SEAT BACK ASSY(SIDE SQUIB LH)

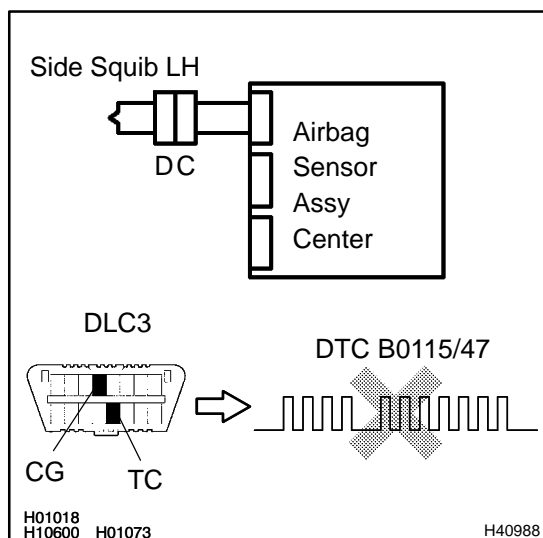

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Connect the connector to the separate type front seat back assy (side squib LH).
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (see page 05-1215 ).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (see page 05-1215 ).

**OK:**

**DTC B0115/47 is not output.**

**HINT:**

Codes other than code B0115/47 may be output at this time, but they are not related to this check.

**NG**

**REPLACE SEPARATE TYPE FRONT SEAT BACK ASSY (SEE PAGE 72-1 1, 72-19 )**

**OK**

### USE SIMULATION METHOD TO CHECK

**HINT:**

- Before performing the simulation method, check that the airbag sensor assy center is in check mode (see page 05-1218 ).
- Perform the simulation method by selecting the check mode with the hand-held tester (see page 05-1218 ).
- After selecting the check mode, perform the simulation method by wiggling each connector of the airbag system or driving the vehicle on a city or rough road (see page 05-1218 ).