

<b>DTC</b>	<b>B1100/31</b>	<b>AIRBAG SENSOR ASSY CENTER MALFUNCTION</b>
------------	-----------------	--------------------------------------------------

## CIRCUIT DESCRIPTION

The airbag sensor assy center consists of a airbag sensor assy center, safing sensor, drive circuit, diagnosis circuit and ignition control, etc.

It receives signals from the airbag sensor, judges whether or not the SRS must be activated, and detects diagnosis system malfunction.

DTC B1100/31 is recorded when occurrence of a malfunction in the airbag sensor assy center is detected.


DTC No.	DTC Detecting Condition	Trouble Area
B1100/31	• Airbag sensor assy center malfunction	• Airbag sensor assy center

### HINT:

When a trouble code is displayed simultaneously with B1100/31, repair the malfunction indicated by this code (except B1100/31) first.

## INSPECTION PROCEDURE

<b>1</b>	<b>CHECK AIR BAG SENSOR ASSY CENTER</b>
----------	-----------------------------------------

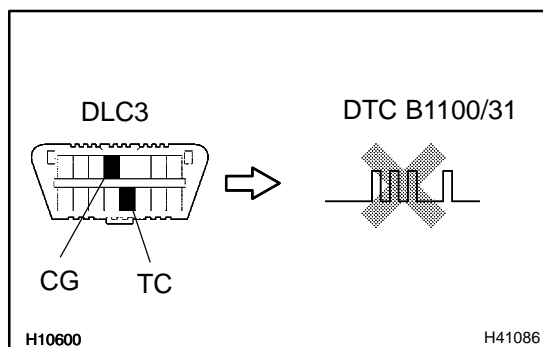

- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (see page 05-1215 ).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (see page 05-1215 ).

**OK:**

**DTC B1100/31 is not output.**

**NG**

**REPLACE AIR BAG SENSOR ASSY CENTER  
(SEE PAGE 60-53 )**

**OK**

**USE SIMULATION METHOD TO CHECK**