

## DIAGNOSTIC TROUBLE CODE CHART

### 1. DTC CHECK

If a trouble code is displayed during the DTC check, check the suspected area listed for that code in the table below, and proceed to the appropriate page.

DTC No. (See Page)	Symptom	Suspected Area
B1241 (05-1548)	Body ECU switch circuit diagnosis	<ul style="list-style-type: none"><li>• Headlamp dimmer switch assy</li><li>• Wire harness or connector</li><li>• Multiplex network body ECU</li></ul>
B1244 (05-1551)	Light sensor circuit malfunction	<ul style="list-style-type: none"><li>• Automatic light control sensor</li><li>• Wire harness or connector</li><li>• Multiplex network body ECU</li></ul>