


VEHICLE POSITION MARK IS NOT UPDATED

INSPECTION PROCEDURE

1 CHECK THE MAP DISC

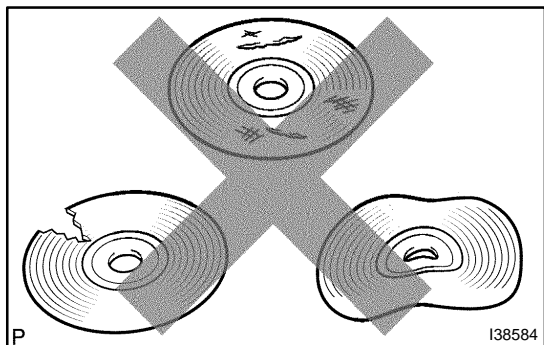

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

2 CHECK THE MAP DISPLAY

- (a) Check if a touch scroll can be performed on the map display.
OK: Touch scroll can be performed.


NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE [05-1778](#))

OK

3 NAVIGATION CHECK MODE(VEHICLE SENSORS)

- (a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page [05-1765](#)).

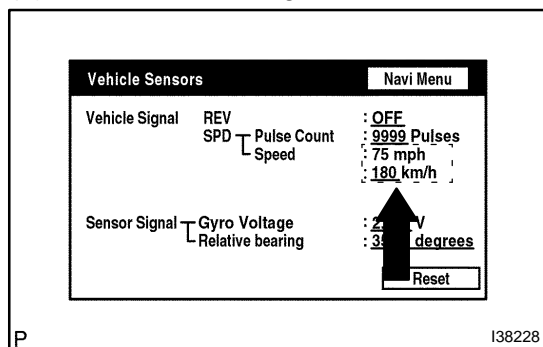

- (b) While driving, compare the "SPEED" indicator to the reading on the speedometer. Check if these readings are almost the same.

OK: The readings are almost the same.

NG

GO TO "SPEED SIGNAL CIRCUIT (NAVIGATION ECU - COMBINATION METER ASSY)" IN THE FLOW CHART (SEE PAGE [05-1838](#))

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE [05-1778](#))