

## GPS MARK IS NOT DISPLAYED

### INSPECTION PROCEDURE

#### 1 CHECK CABIN

- (a) Check the cabin for any object that might interrupt radio reception on the instrument panel. If such an object exists, remove it and check if the GPS mark appears.

HINT:

GPS works using extremely weak radio waves originating from satellites. If the signal is interrupted by obstructions or another radio wave, the GPS system may not be able to properly receive the signal.

**OK: Mark appears.**

OK

**NORMAL OPERATION**

NG


#### 2 CHECK SURROUNDINGS

- (a) Check if the vehicle is in a location where GPS signal reception is bad. If the vehicle is in such a place, move it elsewhere and check if the GPS mark appears.

HINT:

- GPS uses 24 satellites in 6 orbits so that at any time 5 satellites will be in line-of-sight of your vehicle.
- GPS signals may not be received, however, depending on surroundings, vehicle direction, and time.

- The following illustrations show some conditions where it may be difficult to receive GPS signals.

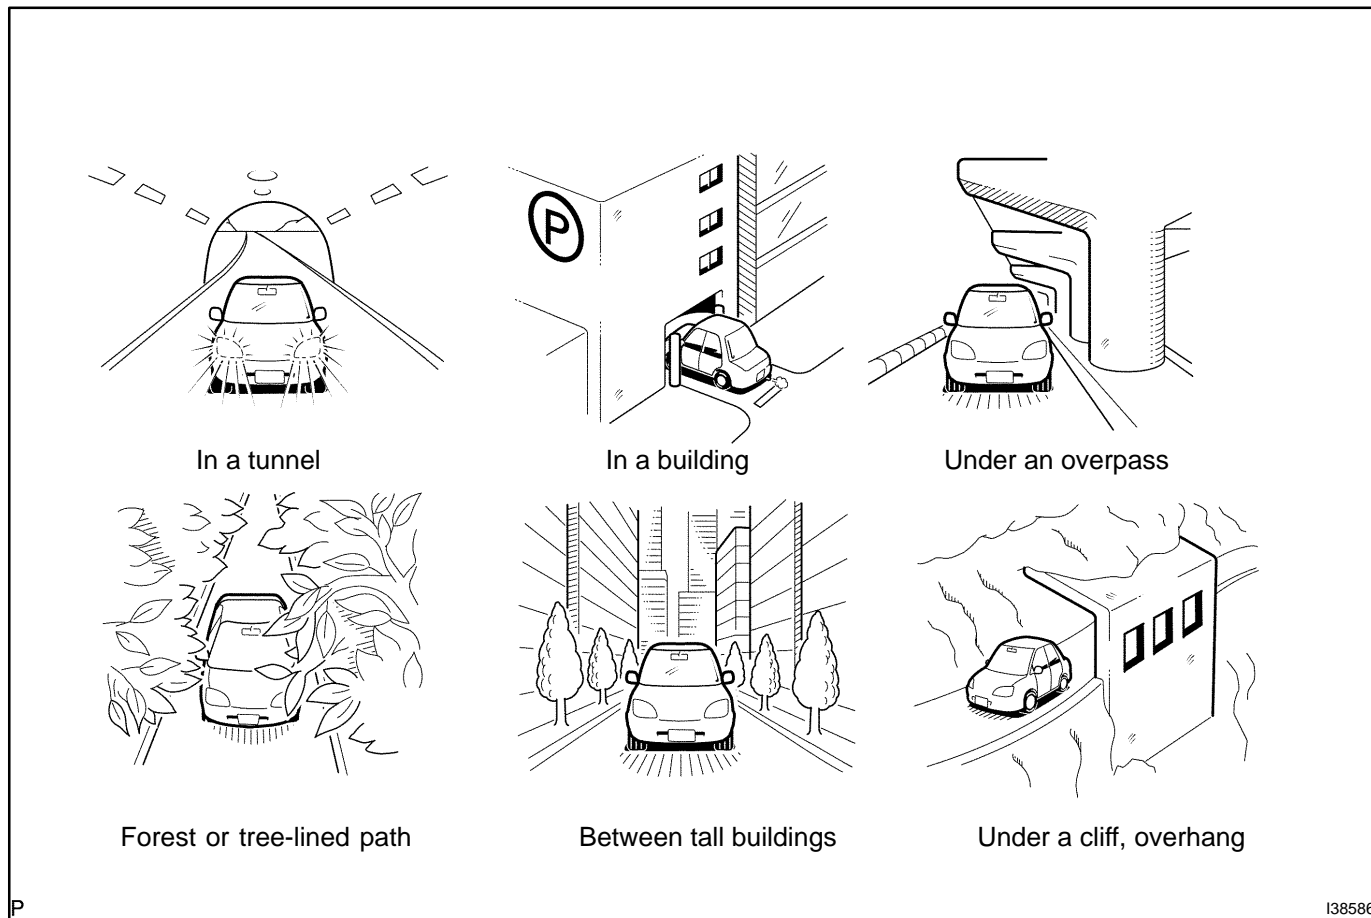

**OK: GPS mark is displayed.**

**OK**

**RETURNS TO NORMAL**

**NG**

### 3 NAVIGATION CHECK MODE(GPS INFORMATION)

- (a) Enter the "Navigation Check" mode (GPS information) (see page 05-1764 ).

GPS Information					Navi Menu				
No.	Elv	Azm	LVL	STS	No.	Elv	Azm	LVL	STS
3	73°	/021°	12	P	5	80°	/279°	54	P
8	52°	/183°	58	P	9	27°	/121°	26	-
10	32°	/219°	39	P	13	19°	/330°	11	-
16	49°	/097°	20	T	18	22°	/300°	12	-
20	61°	/045°	39	T	21	40°	/142°	49	T
23	72°	/278°	57	P	24	17°	/350°	13	-
Measurement Date (G) 98/05/47 09:46:00									
status: 3D									
Latitude 39° 58'									
Longitude 137° 00.12'									

P

I38226

- (b) Check how many of the following codes occur in the "STS" column.

**OK: At least 3 codes occur.**

**OK**

**REPLACE NAVIGATION ECU  
(SEE PAGE 67-9)**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE 05-1778 )**