

## TOUCH PANEL SWITCH DOES NOT FUNCTION

### INSPECTION PROCEDURE

#### 1 CHECK TOUCH PANEL

- (a) Check for dirt on the display surface.

**OK: The display surface is clean.**


**NG**

**REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL**

**OK**

#### 2 DISPLAY CHECK MODE(TOUCH SWITCH CHECK)

- (a) Enter the "Display Check" mode (Touch Switch Check) (see page [05-1761](#) ).

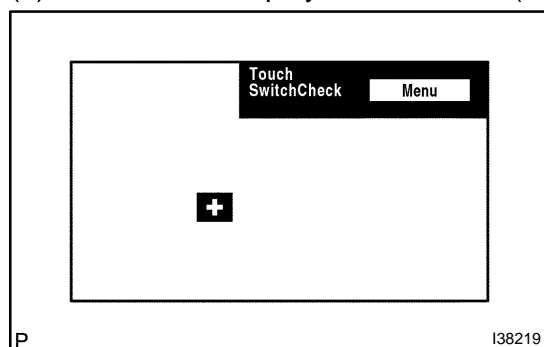

- (b) Touch the display in the area where the abnormal switch occurs.

**OK: A "+" mark appears at the touched position.**

**OK**

**REPLACE MULTI-DISPLAY  
(SEE PAGE [67-8](#) )**

**NG**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE [05-1778](#) )**