


POWER SOURCE CIRCUIT (MULTI-DISPLAY)

CIRCUIT DESCRIPTION

This circuit provides power to the multi-display.

WIRING DIAGRAM

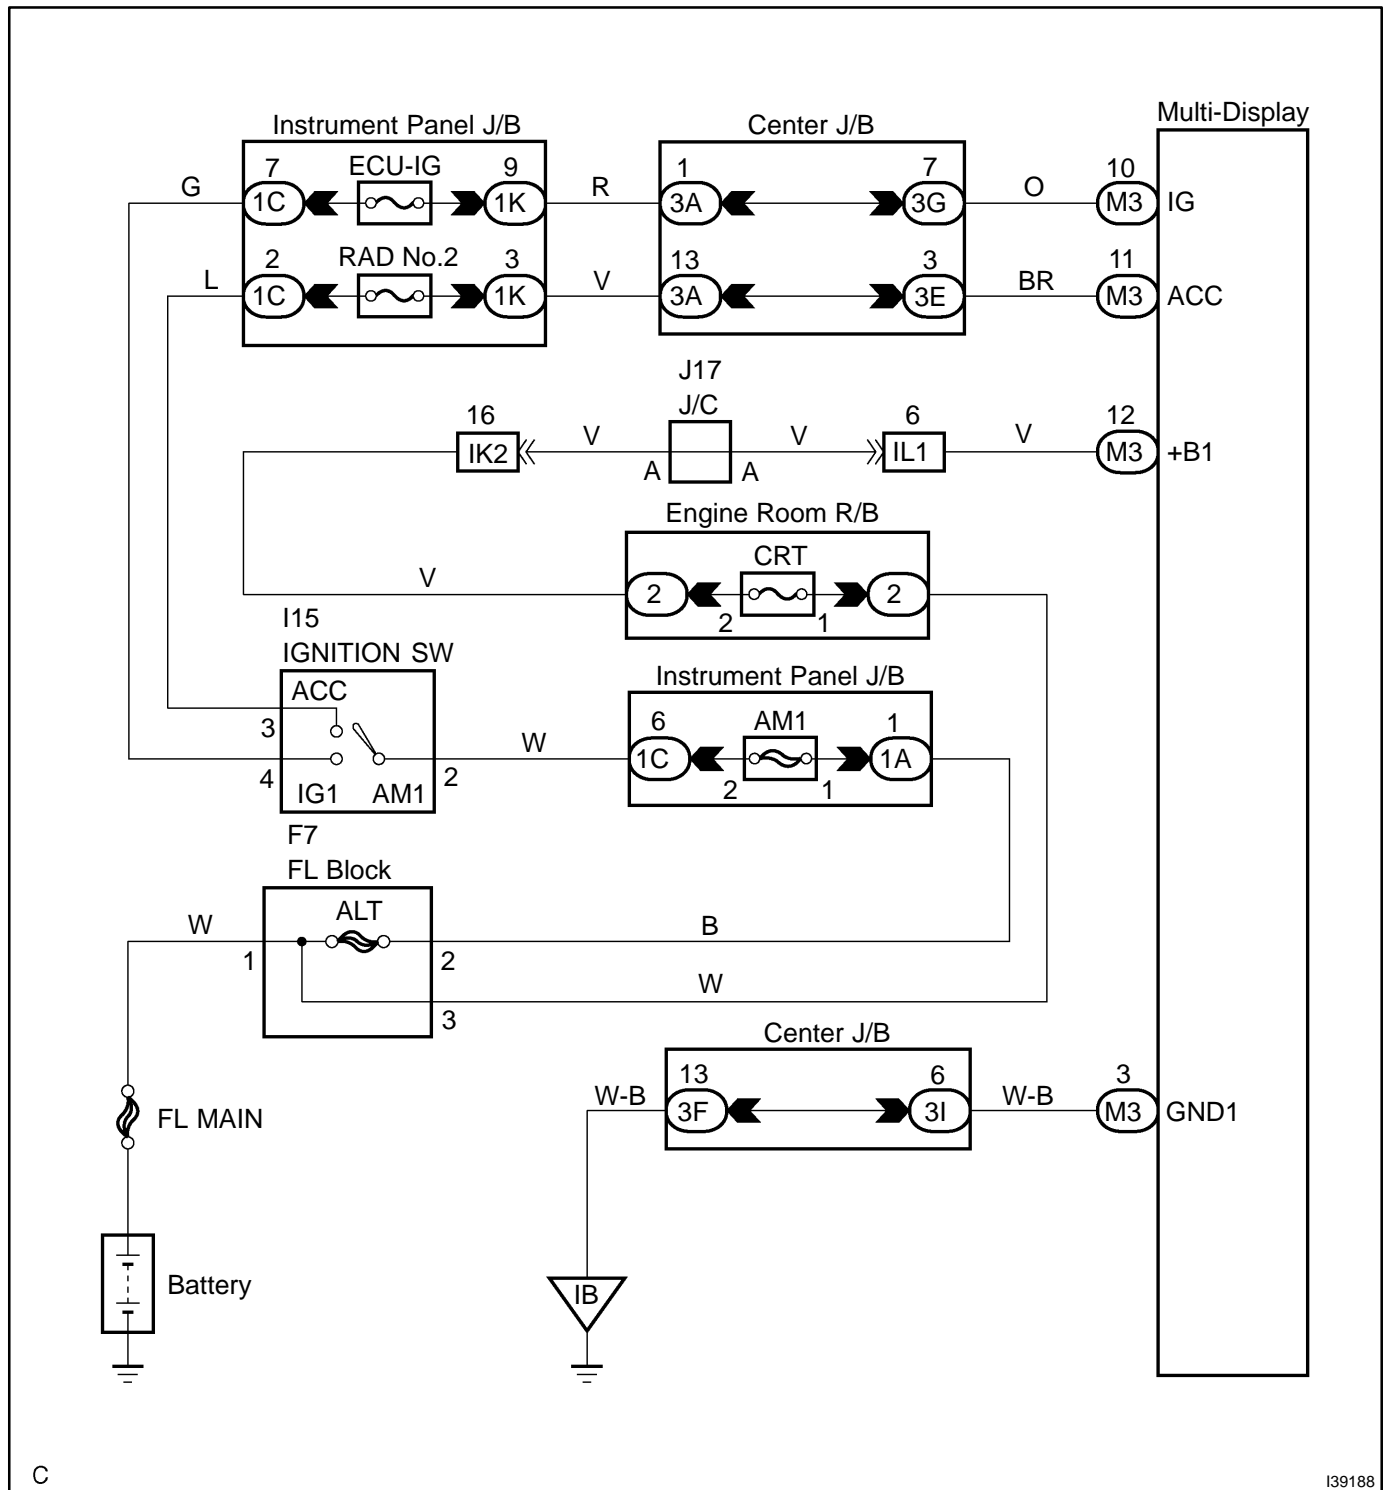


C

I39188

INSPECTION PROCEDURE

1 INSPECT MULTI-DISPLAY(+B1, ACC, IG, GND1)

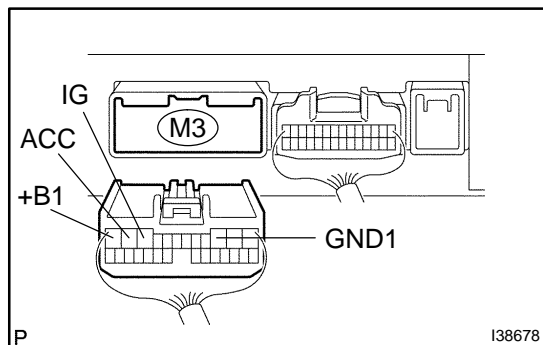

- (a) Disconnect the multi-display connector M3.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
GND1 - Body ground	Always	Below 1 Ω

- (c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
+B1 - GND1	Always	10 to 14 V
ACC - GND1	Ignition SW ACC	10 to 14 V
IG - GND1	Ignition SW ON	10 to 14 V

NG
REPAIR OR REPLACE HARNESS OR CONNECTOR
OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE OR DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE [05-1778](#) OR [05-1791](#))