

<b>DTC</b>	<b>P0766</b>	<b>SHIFT SOLENOID "D" PERFORMANCE (SHIFT SOLENOID VALVE S4)</b>
------------	--------------	---

## SYSTEM DESCRIPTION

The ECM uses signals from the vehicle speed sensor to detect the actual gear position (1st, 2nd, 3rd or O/D gear).

Then the ECM compares the actual gear with the shift schedule in the ECM memory to detect mechanical problems of the shift solenoid valves and valve body.

DTC No.	DTC Detecting Condition	Trouble Area
P0766	The gear required by the ECM does not match the actual gear when driving (2-trip detection logic)	<ul style="list-style-type: none"> <li>• Shift solenoid valve S4 remains open or closed</li> <li>• Valve body is blocked</li> <li>• Shift solenoid valve S4</li> <li>• Automatic transaxle (clutch, brake or gear etc.)</li> <li>• ECM</li> </ul>

## MONITOR DESCRIPTION

The ECM commands gear shifts by turning the shift solenoid valves "ON/OFF". According to the input shaft revolution, intermediate (counter) shaft revolution and output shaft revolution, the ECM detects the actual gear position (1st, 2nd, 3rd or O/D gear position). When the gear position commanded by the ECM and the actual gear position are not same, the ECM illuminates the MIL and stores the DTC.

## MONITOR STRATEGY

Related DTCs	P0766: Shift solenoid valve S4/ON malfunction Shift solenoid valve S4/OFF malfunction
Required sensors/Components	Shift solenoid valve S4, Speed sensor (NT), Speed sensor (NC), Crankshaft position sensor (NE)
Frequency of operation	Continuous
Duration	1 sec.
MIL operation	2 driving cycles
Sequence of operation	None

## TYPICAL ENABLING CONDITIONS

All:

Transmission range	"D"
ECT (Engine coolant temperature)	60 °C (140 °F) or more
TFT (Transmission fluid temperature)	-20 °C (-4 °F) or more
TFT sensor circuit	Not circuit malfunction
ECT sensor circuit	Not circuit malfunction
Turbine speed sensor circuit	Not circuit malfunction
Intermediate shaft speed sensor circuit	Not circuit malfunction
Output speed sensor circuit	Not circuit malfunction
Shift solenoid valve SL1 circuit	Not circuit malfunction
Shift solenoid valve SL2 circuit	Not circuit malfunction
Shift solenoid valve S4 circuit	Not circuit malfunction
Electronic throttle system	Not circuit malfunction

### OFF malfunction

ECM selected gear	4th
Throttle valve opening angle	5% or more
Vehicle speed	10 km/h (6.2 mph) or more

### ON malfunction

ECM selected gear	3rd
Throttle valve opening angle	5% or more
Vehicle speed	10 km/h (6.2 mph) or more

## TYPICAL MALFUNCTION THRESHOLDS

**Either of the following conditions is met: OFF malfunction or ON malfunction**

2 detections are necessary per driving cycle:

1st detection; temporary flag ON

2nd detection; pending fault code ON

### OFF malfunction

Intermediate shaft speed/Output speed	1.34 to 1.48
---------------------------------------	--------------

### ON malfunction

Intermediate shaft speed/Output speed	0.95 to 1.09
---------------------------------------	--------------

## INSPECTION PROCEDURE

### HINT:

Performing the ACTIVE TEST using the hand-held tester allows the relay, VSV, actuator and so on to operate without parts removal. Performing the ACTIVE TEST as the first step of troubleshooting is one method to shorten labor time.

It is possible to display the DATA LIST during the ACTIVE TEST.

- Turn the ignition switch off.
- Connect the hand-held tester to the DLC3.
- Turn the ignition switch to the ON position.
- Push the "ON" button of the hand-held tester.
- Select the item "DIAGNOSIS/ENHANCED OBD II/ACTIVE TEST/SHIFT".
- According to the display on tester, perform the "ACTIVE TEST".

### HINT:

While driving, the shift position can be forcibly changed with the hand-held tester.

Comparing the shift position commanded by the ACTIVE TEST with the actual shift position enables you to confirm the problem (see page 05-916 ).

Item	Test Details	Diagnostic Note
SHIFT	[Test Details] Operate the shift solenoid valve and set the each shift position by yourself. [Vehicle Condition] Less than 50 km/h (31 mph) [Others] • Press "→" button: Shift up • Press "←" button: Shift down	Possible to check the operation of the shift solenoid valves.

### HINT:

- This test can be conducted when the vehicle speed is 50 km/h (31 mph) or less.
- The shift position commanded by the ECM is shown in the DATA LIST/SHIFT display on the hand-held tester.

## 1 CHECK OTHER DTCS OUTPUT(IN ADDITION TO DTC P0766)

- Connect the OBD II scan tool or the hand-held tester to the DLC3.
- Turn the ignition switch to the ON position and push the OBD II scan tool or the hand-held tester main switch ON.
- When you use hand-held tester:  
Select the item "DIAGNOSIS/ENHANCED OBD II/DTC INFO/CURRENT CODES".
- Read the DTCs using the OBD II scan tool or the hand-held tester.

### Result:

Display (DTC output)	Proceed to
Only "P0766" is output	A
"P0766" and other DTCs	B

### HINT:

If any other codes besides "P0766" is output, perform the troubleshooting for those DTCs first.


**B**

**GO TO RELEVANT DTC CHART  
(SEE PAGE 05-920 )**

**A**

## 2 INSPECT SHIFT SOLENOID VALVE(S4)

### Shift Solenoid Valve S4:

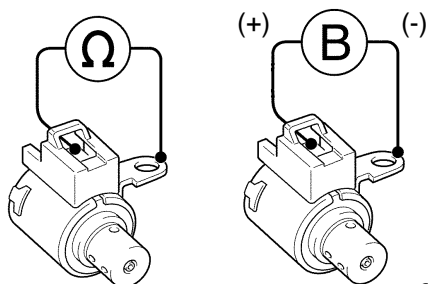

G28386

- Remove the shift solenoid valve S4.
- Measure the resistance according to the value(s) in the table below.

#### Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
Solenoid Connector (S4) - Solenoid Body (S4)	11 to 15 Ω

- Connect positive (+) lead to the terminal of solenoid connector, negative (-) lead to the solenoid body.

#### OK:

The solenoid makes an operating noise.

NG

REPLACE SHIFT SOLENOID VALVE(S4)

OK

## 3 INSPECT TRANSMISSION VALVE BODY ASSY(See chapter 2 in the problem symptoms table) (SEE PAGE 05-904 )

#### OK:

There are no foreign objects on each valve and they operate smoothly.

NG

REPAIR OR REPLACE TRANSMISSION VALVE BODY ASSY (SEE PAGE 40-40 )

OK

## 4 INSPECT TORQUE CONVERTER CLUTCH ASSY (SEE PAGE 40-29 )

#### OK:

The torque converter clutch operates normally.

NG

REPLACE TORQUE CONVERTER CLUTCH ASSY

OK

REPAIR OR REPLACE AUTOMATIC TRANSAXLE ASSY (SEE PAGE 40-12 )