

ELECTRONIC CONTROLLED AUTOMATIC TRANSAXLE [ECT] (U241E/U140F)

05C0T-29

PRECAUTION

NOTICE:

Perform the RESET MEMORY (AT initialization) when replacing the automatic transaxle assy, engine assy or ECM (see page [05-893](#)).

HINT:

Initialization can not be completed by only disconnecting the battery terminal.