



REPLACEMENT

1. DRAIN ENGINE COOLANT (See page 16-26)
2. REMOVE FRONT SUSPENSION BRACE SUB-ASSY UPPER CENTER
 - (a) Remove the 2 nuts and upper brace.

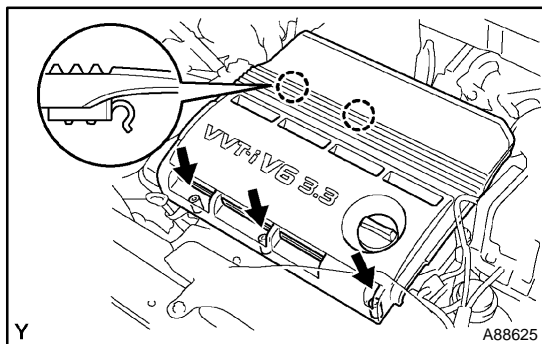


3. REMOVE V-BANK COVER SUB-ASSY
 - (a) Using a socket hexagon wrench 5, remove the 3 nuts.
 - (b) Remove the V-bank cover.


4. REMOVE AIR CLEANER INLET ASSY (See page 14-149)
5. REMOVE AIR CLEANER ASSY (See page 14-149)

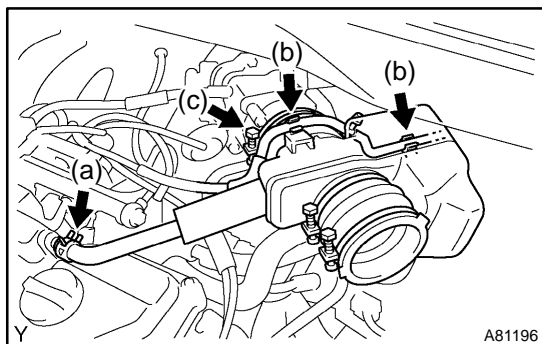

6. REMOVE INTAKE AIR RESONATOR
 - (a) Remove the ventilation hose No. 2.
 - (b) Remove the fuel vapor feed hose from the 2 hose clamps.
 - (c) Loosen the air cleaner hose clamp bolt, and then remove the intake air resonator.

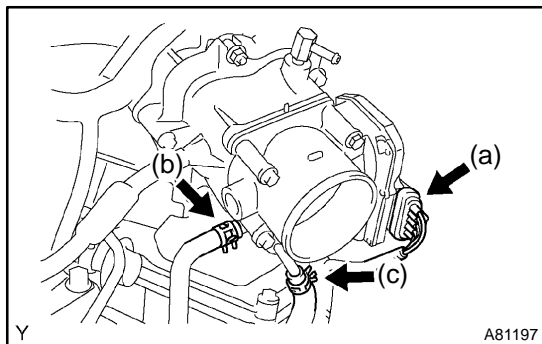

7. REMOVE THROTTLE BODY ASSY
 - (a) Disconnect the throttle control motor & throttle position sensor connector.
 - (b) Disconnect the water by-pass hose No. 2.
 - (c) Disconnect the water by-pass hose No. 3.

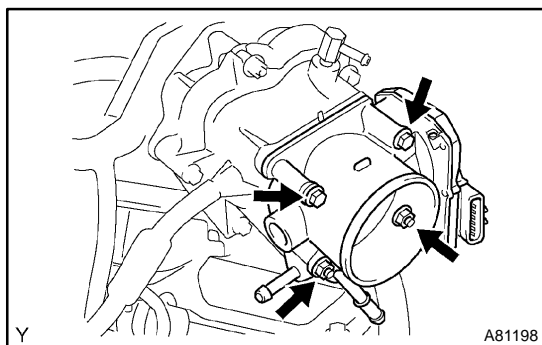

- (d) Remove the 2 bolts, 2 nuts and throttle body.
- (e) Remove the gasket.

8. INSTALL THROTTLE BODY ASSY

- (a) Install a new gasket to the intake air connector.
- (b) Install the throttle body with the 2 bolts and 2 nuts.
Torque: 11 N·m (112 kgf·cm, 8 ft·lbf)
- (c) Connect the water by-pass hose No. 3.
- (d) Connect the water by-pass hose No. 2.
- (e) Connect the throttle control motor & throttle position sensor connector.

9. INSTALL INTAKE AIR RESONATOR**10. INSTALL AIR CLEANER ASSY (See page 14-149)****11. INSTALL AIR CLEANER INLET ASSY (See page 14-149)****12. CHECK CONNECTION OF VACUUM HOSE (See page 14-149)****13. ADD ENGINE COOLANT (See page 16-26)****14. CHECK FOR ENGINE COOLANT LEAKS (See page 16-20)****15. INSTALL V-BANK COVER SUB-ASSY**

- (a) Fit the 2 retainers and install the V-bank cover.
- (b) Using a socket hexagon wrench 5, tighten the 3 nuts.

Torque: 7.9 N·m (81 kgf·cm, 70 in·lbf)

16. INSTALL FRONT SUSPENSION BRACE SUB-ASSY UPPER CENTER

- (a) Install the upper brace with the 2 nuts.

Torque: 80 N·m (815 kgf·cm, 59 ft·lbf)