



## ECM (3MZ-FE) REPLACEMENT

100IW-02


1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE FRONT DOOR SCUFF PLATE RH (See page 71-10 )
3. REMOVE COWL SIDE TRIM SUB-ASSY RH (See page 71-10 )
4. REMOVE GLOVE COMPARTMENT DOOR ASSY (See page 71-10 )
5. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71-10 )

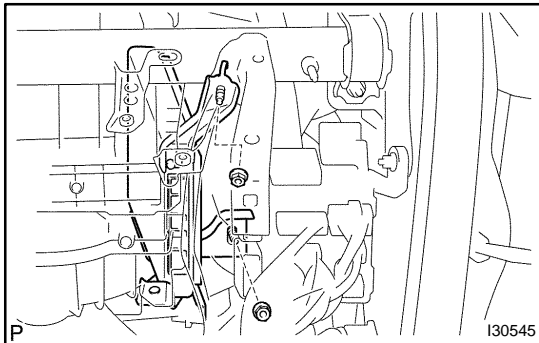


6. REMOVE ECM
  - (a) Remove the 2 wire harness clamps.
  - (b) Disconnect the 5 ECM connectors.
  - (c) Remove the 2 nuts and ECM.

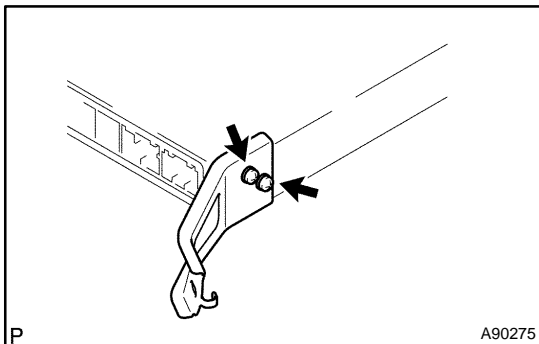


7. REMOVE ECM BRACKET NO. 1
  - (a) Remove the 2 screws and ECM bracket.

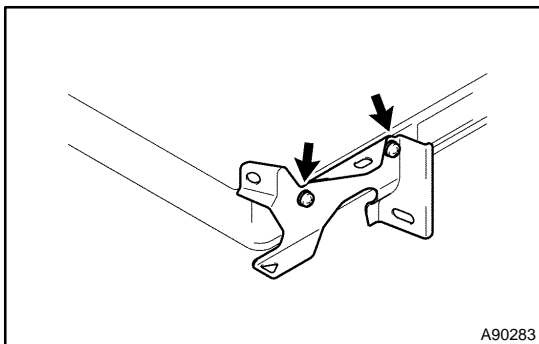

8. REMOVE ECM BRACKET NO. 2
  - (a) Remove the 2 screws and ECM bracket.
9. INSTALL ECM BRACKET NO. 2
  - (a) Install the ECM bracket with the 2 screws.

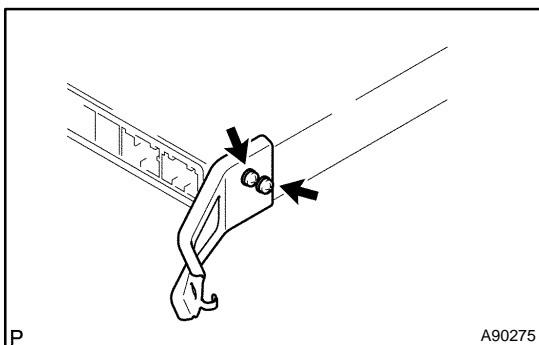

10. INSTALL ECM BRACKET NO. 1
  - (a) Install the ECM bracket with the 2 screws.

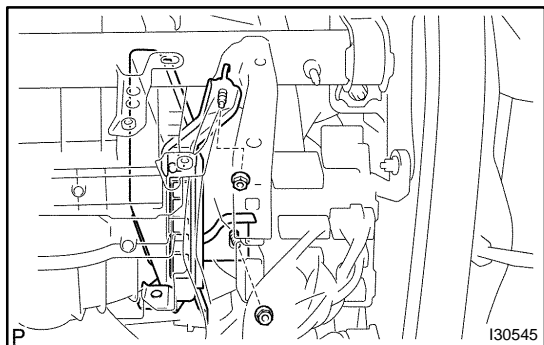**11. INSTALL ECM**

- (a) Install the 2 wire harness clamps.
- (b) Connect the 5 ECM connectors.
- (c) Install the ECM with the 2 nuts.

**Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)**

- 12. INSTALL INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (See page 71-10 )**
- 13. INSTALL GLOVE COMPARTMENT DOOR ASSY (See page 71-10 )**
- 14. INSTALL COWL SIDE TRIM SUB-ASSY RH (See page 71-10 )**
- 15. INSTALL FRONT DOOR SCUFF PLATE RH (See page 71-10 )**
- 16. CONNECT BATTERY NEGATIVE TERMINAL**