


# CAMSHAFT (LH BANK) (3MZ-FE)

141PN-01


## REPLACEMENT

1. DRAIN ENGINE COOLANT (See page 16-26 )
2. REMOVE FR WIPER ARM LH (See page 66-7 )
3. REMOVE FR WIPER ARM RH (See page 66-7 )
4. REMOVE COWL TOP VENTILATOR LOUVER SUB-ASSY (See page 66-7 )
5. REMOVE WINDSHIELD WIPER LINK ASSY (See page 66-7 )
6. REMOVE COWL PANEL SUB-ASSY
7. REMOVE FRONT SUSPENSION BRACE SUB-ASSY UPPER CENTER
8. REMOVE V-BANK COVER SUB-ASSY (See page 14-149 )
9. REMOVE RADIATOR HOSE INLET
10. REMOVE IGNITION COIL ASSY
11. REMOVE CYLINDER HEAD COVER SUB-ASSY LH (See page 14-173 )
12. REMOVE FRONT WHEEL RH
13. REMOVE ENGINE UNDER COVER NO.1
14. REMOVE FRONT FENDER APRON SEAL RH
15. REMOVE V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1 (See page 14-125 )
16. REMOVE VANE PUMP V BELT (See page 14-125 )
17. REMOVE ENGINE MOVING CONTROL ROD (See page 14-149 )
18. REMOVE ENGINE MOUNTING STAY NO.2 RH (See page 14-149 )
19. REMOVE GENERATOR BRACKET NO.2
20. REMOVE CRANKSHAFT PULLEY (See page 14-173 )
21. REMOVE TIMING BELT NO.1 COVER
22. REMOVE TIMING BELT NO.2 COVER (See page 14-206 )
23. REMOVE ENGINE MOUNTING BRACKET RH
24. REMOVE TIMING BELT GUIDE NO.2
25. REMOVE TIMING BELT (See page 14-206 )
26. REMOVE TIMING BELT IDLER SUB-ASSY NO.2

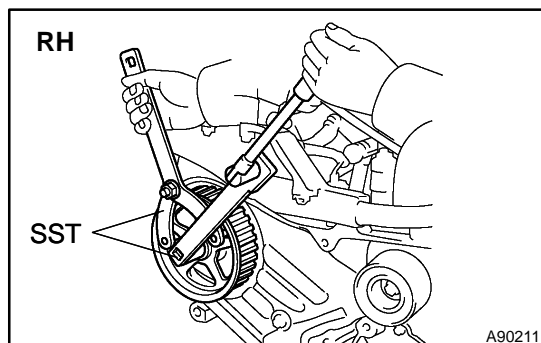

### 27. REMOVE CAMSHAFT TIMING PULLEY


- (a) Using SST, remove the bolt and RH timing pulley.  
SST 09960- 10010 (09962- 01000, 09963- 01000),  
09249-63010

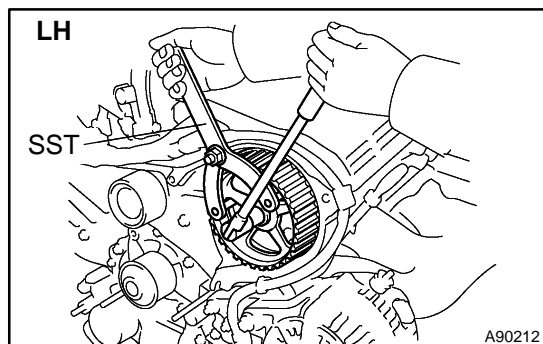

- (b) Using SST, remove the bolt and LH timing pulley.  
SST 09960-10010 (09962-01000, 09963-01000)

**HINT:**


Arrange the camshaft timing pulleys (RH and LH sides) so that they can be returned to their original locations when reassembled.

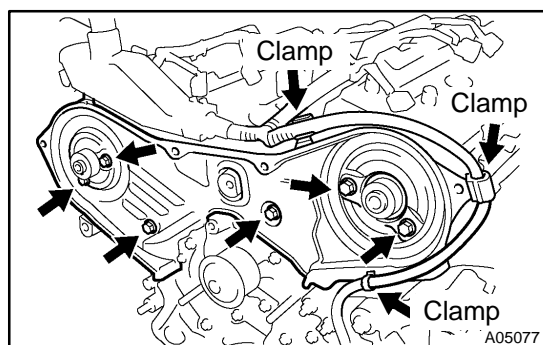**28. REMOVE TIMING BELT NO.3 COVER**


- (a) Disconnect the 3 engine wire harness clamps from the timing belt No. 3 cover.  
(b) Remove the 6 bolts and the timing belt cover.

**29. REMOVE NO.3 CAMSHAFT SUB-ASSY****NOTICE:**

Since the thrust clearance of the camshaft is small, the camshaft must be kept level while it is being removed. If the camshaft is not kept level, damage to the cylinder head or to the camshaft may result. To avoid this, the following steps must be carried out.

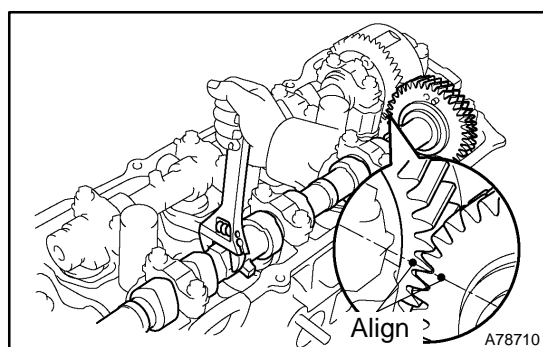

- (a) Align the camshaft drive and driven gear's timing marks (1 dot mark each) by turning the camshaft with a wrench.

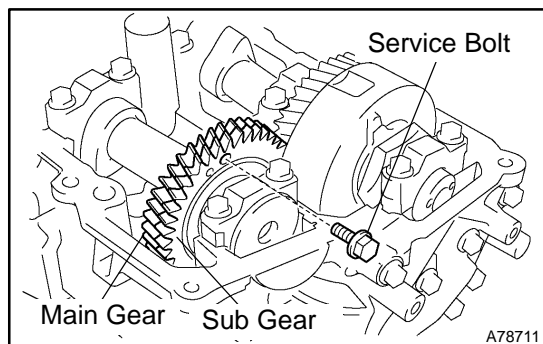

- (b) Secure the exhaust camshaft sub gear to the main gear with a service bolt.


Recommended service bolt:

Thread diameter	6 mm
Thread pitch	1.0 mm
Bolt length	16 to 20 mm

**Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)**

**HINT:**


When removing the camshaft, make certain that the torsional spring force of the sub gear has been eliminated by installation of the service bolt.

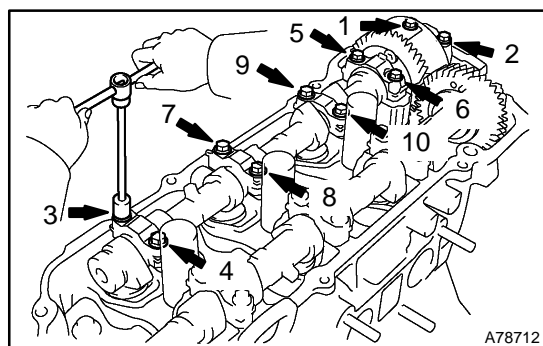

- (c) Uniformly loosen and remove the 10 bearing cap bolts in the sequence shown in the illustration. Remove the 5 bearing caps and the No. 3 camshaft.

**NOTICE:**

- Do not pry out the camshaft.
- Be careful not to damage the portion of the cylinder head receiving the shaft thrust.

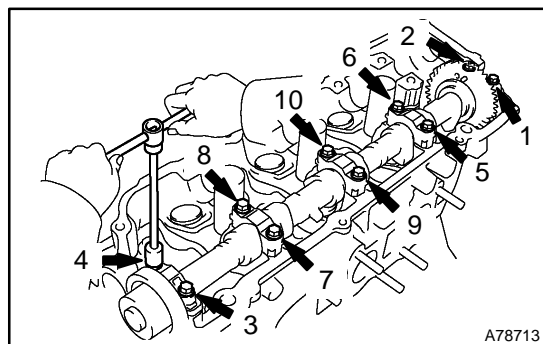


**30. REMOVE NO.4 CAMSHAFT SUB-ASSY**

- (a) Uniformly loosen and remove the 10 bearing cap bolts in the sequence shown in the illustration. Remove the 5 bearing caps and the No. 4 camshaft.

**NOTICE:**

- Do not pry out the camshaft.
- Be careful not to damage the portion of the cylinder head receiving the shaft thrust.

- (b) Remove the oil seal from the No. 4 camshaft.

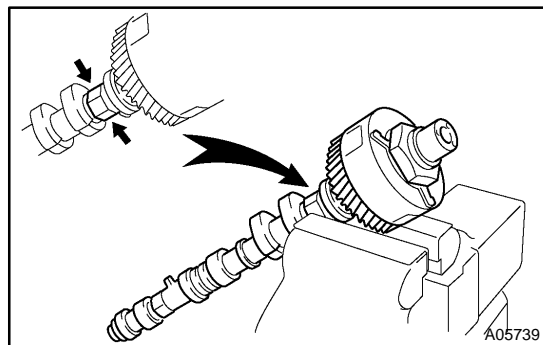

**31. REMOVE CAMSHAFT TIMING GEAR ASSY**


**NOTICE:**

Do not remove or install the timing gear (VVT-i) unless you are replacing the VVT-i or the camshaft.

- (a) Clamp the camshaft in a vise on the hexagonal lobe.

**NOTICE:**

Do not damage the camshaft.

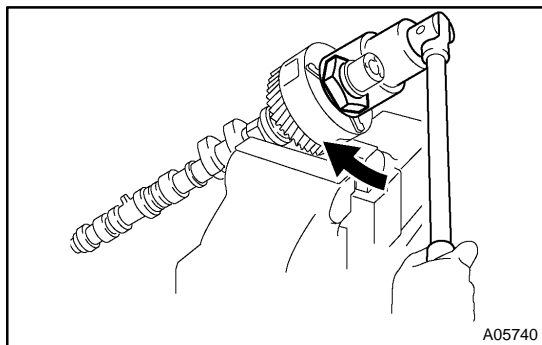

- (b) Using a 46 mm socket wrench, remove the lock nut by turning it clockwise.

**NOTICE:**


- Remove it with the lock-pin engaged and locked at the extreme retarded angle position.
- The lock nut has LH threads.
- Only use the socket wrench. Other tools will deform the cam angle rotor.

- (c) Remove the timing gear (VVT-i).

**NOTICE:**

**Never remove the 3 bolts on the gear.**

If it is difficult to remove the VVT-i, tap it lightly using a plastic-faced hammer and then remove it.

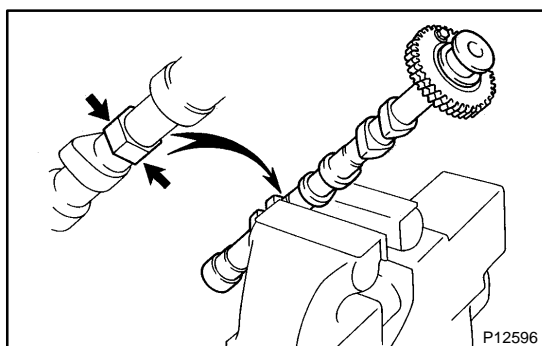


### 32. REMOVE CAMSHAFT SUB GEAR NO.3

- (a) Clamp the camshaft in a vise on the hexagonal lobe.


**NOTICE:**

**Be careful not to damage the camshaft.**

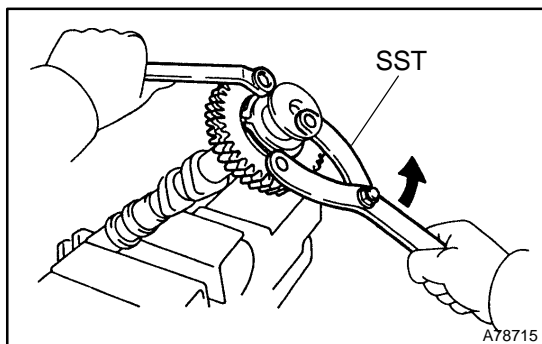

- (b) Using SST, turn the sub gear counterclockwise, and remove the service bolt.


SST 09960-10010 (09962-01000, 09963-00500)

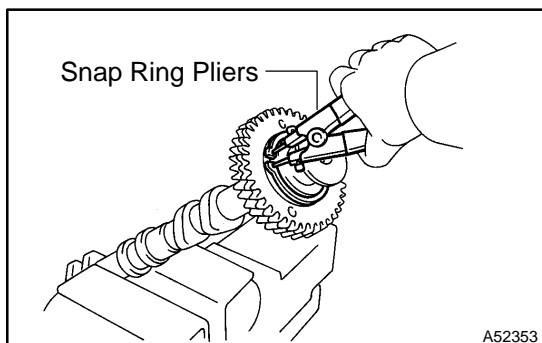

- (c) Using snap ring pliers, remove the snap ring.  
(d) Remove the wave washer, camshaft sub gear and camshaft gear bolt washer.

**HINT:**

Arrange the camshaft sub gears and gear bolt washers (RH and LH sides) so that they can be returned to their original location when reassembled.

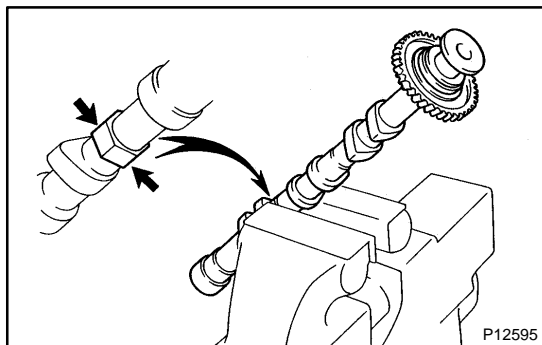


### 33. INSTALL CAMSHAFT SUB GEAR NO.3

- (a) Clamp the camshaft in a vise on the hexagonal lobe.

**NOTICE:**

Be careful not to damage the camshaft.

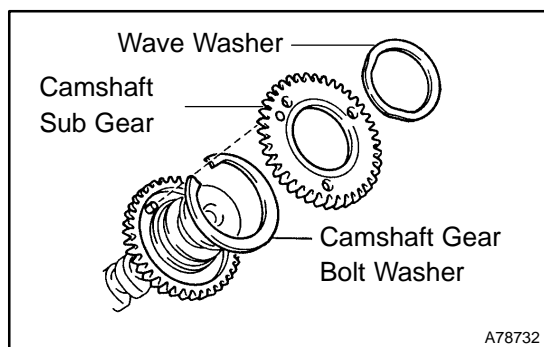


- (b) Install the camshaft gear bolt washer and the camshaft sub gear.


**HINT:**

Attach the pins on the gears to the gear bolt washer ends.

- (c) Install the wave washer.

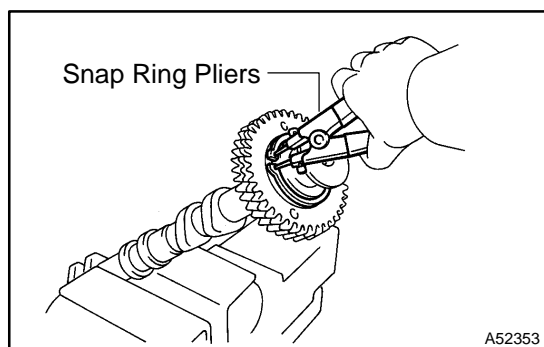

- (d) Using snap ring pliers, install the snap ring.

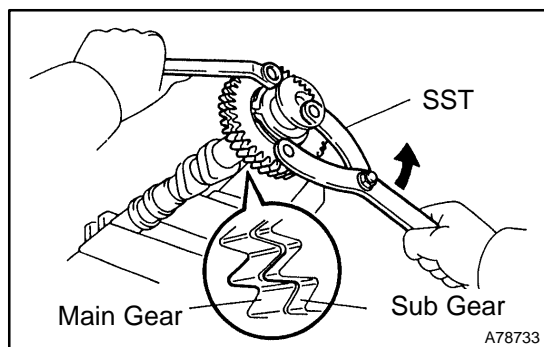

- (e) Using SST, align the holes of the camshaft main gear and sub gear by turning the camshaft sub gear counterclockwise, and temporarily install a service bolt.

SST 09960-10010 (09962-01000, 09963-00500)

- (f) Align the gear teeth of the main gear and sub gear, and tighten the service bolt.


**Torque: 5.0 N·m (51 kgf·cm, 44 in.·lbf)**

**NOTICE:**

Be careful not to damage the camshaft journals.

**HINT:**

When installing the camshaft, make certain that the torsional spring force of the sub gear has been eliminated by installation of the service bolt.

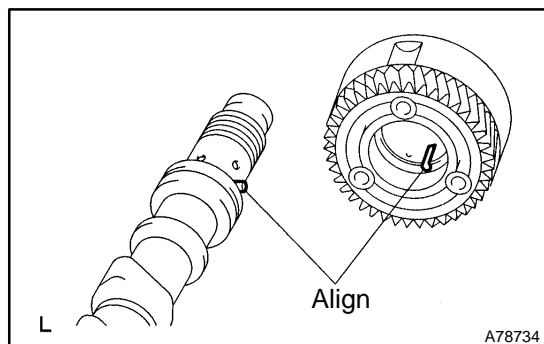**34. INSTALL CAMSHAFT TIMING GEAR ASSY**

- (a) Align the alignment pin with the alignment pin groove and install the VVT-i on the camshaft.


**NOTICE:**

**Install the VVT-i with the lock-pin engaged and locked at the extreme retarded angle position.**

- (b) Apply engine oil on the nut, the mounting surface of the VVT-i and the screw threads.

**NOTICE:**

- **Be sure to apply the oil, otherwise the specified torque cannot be obtained.**
- **New nuts must be used when replacing the VVT-i unit.**

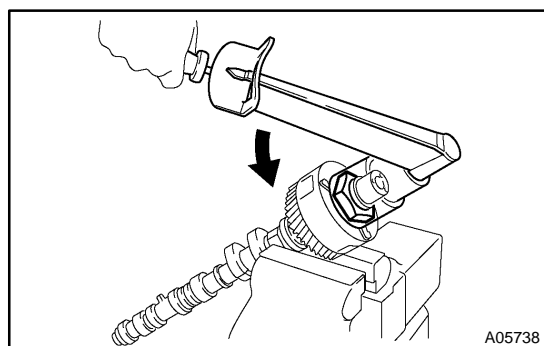

- (c) Using a 46 mm socket wrench, install and tighten a lock nut by turning it counterclockwise.


**Torque: 150 N·m (1,530 kgf·cm, 111 ft·lbf)**

**NOTICE:**


- **The lock nut has LH threads.**
- **Never use any tools other than the socket wrench. Other tools will deform the cam angle rotor.**

**35. INSTALL NO.4 CAMSHAFT SUB-ASSY****NOTICE:**

**Since the thrust clearance of the camshaft is small, the camshaft must be kept level while it is being installed. If the camshaft is not kept level, damage to the cylinder head or to the camshaft may result. To avoid this, the following steps must be carried out.**

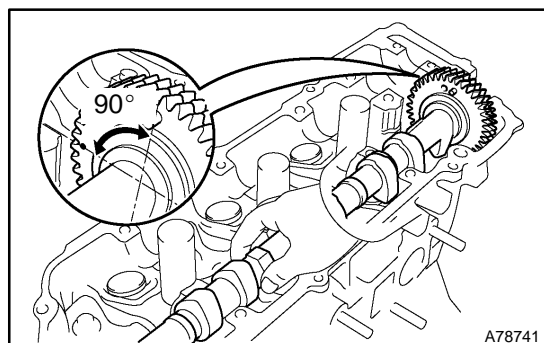


- (a) Apply new engine oil to the thrust portion and journal of the camshaft.
- (b) Place the No. 4 camshaft at a 90° angle of the timing mark (1 dot mark) on the cylinder head.
- (c) Apply MP grease to a new oil seal lip.

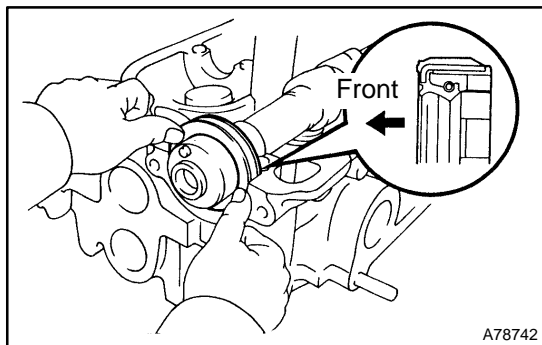

- (d) Install the oil seal to the camshaft.

**NOTICE:**

- Do not turn over the oil seal lip.
- Insert the oil seal until it stops.

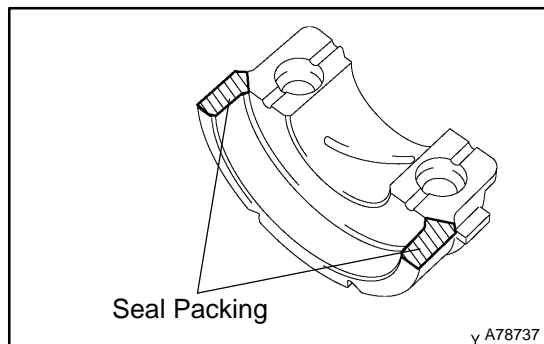


- (e) Remove any old packing material from the contact surface.

- (f) Apply seal packing to the No. 1 bearing cap, as shown in the illustration.

**Seal packing: Part No. 08826-00080 or equivalent**


**NOTICE:**

- Install the No. 1 bearing cap within 5 minutes after applying seal packing.
- Do not expose the seal to engine oil for at least 2 hours after installing.

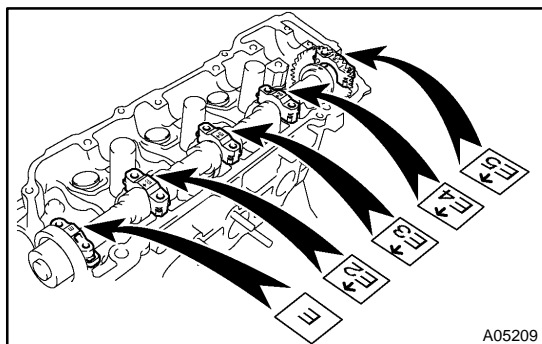

- (g) Install the 5 bearing caps in their proper locations.

- (h) Apply a light coat of engine oil to the threads of the bearing cap bolts.

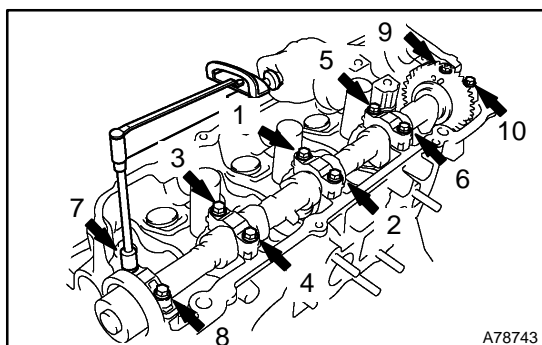


- (i) Uniformly tighten the 10 bearing cap bolts in the sequence shown in the illustration.

**Torque: 16 N·m (163 kgf·cm, 12 ft·lbf)**


### 36. INSTALL NO.3 CAMSHAFT SUB-ASSY

**NOTICE:**


Since the thrust clearance of the camshaft is small, the camshaft must be kept level while it is being installed. If the camshaft is not kept level, damage to the cylinder head or to the camshaft may result. To avoid this, the following steps must be carried out.

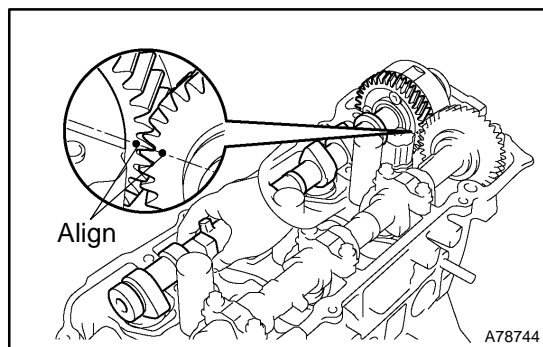

- (a) Apply new engine oil to the thrust portion and journal of the camshaft.
- (b) Align the camshaft drive and driven gear's timing marks (1 dot mark each).
- (c) Place the camshaft on the cylinder head.

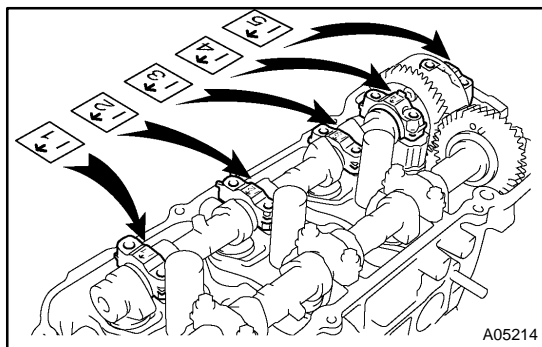

- (d) Install the 5 bearing caps in their proper locations.
- (e) Apply a light coat of engine oil to the threads of the bearing cap bolts.

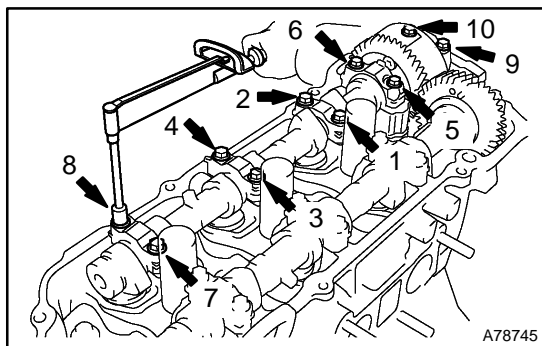


- (f) Uniformly tighten the 10 bearing cap bolts in the sequence shown in the illustration.  
**Torque: 16 N·m (163 kgf·cm, 12 ft·lbf)**
- (g) Remove the service bolt.

### 37. INSTALL TIMING BELT NO.3 COVER

- (a) Visually check for cracks and breaks on the gasket of the timing belt cover.

#### HINT:

If water is entering through cracks or breaks in the gasket, repair according to these guidelines: 1) if the crack length is within 2 to 3 cm (0.79 to 1.18 in.), repair with seal packing; or 2) if the crack length is over 3 cm (1.18 in.), replace the gasket.

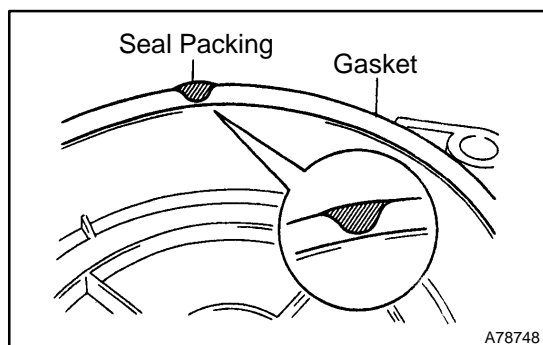

- (b) If the timing belt cover gasket needs to be repaired, follow the procedure below.
  - (1) Repair the cracks and breaks by applying the seal packing to the damaged area.

**Seal packing: Part No. 08826-00080 or equivalent**

#### NOTICE:


**When applying the seal packing, apply it as wide and high as the gasket.**



- (c) If the timing belt cover gasket needs to be replaced, follow the procedure below.
- (1) Using a screwdriver and gasket scraper, remove the remaining gasket.

**NOTICE:**

**Be careful not to damage the timing belt cover.**

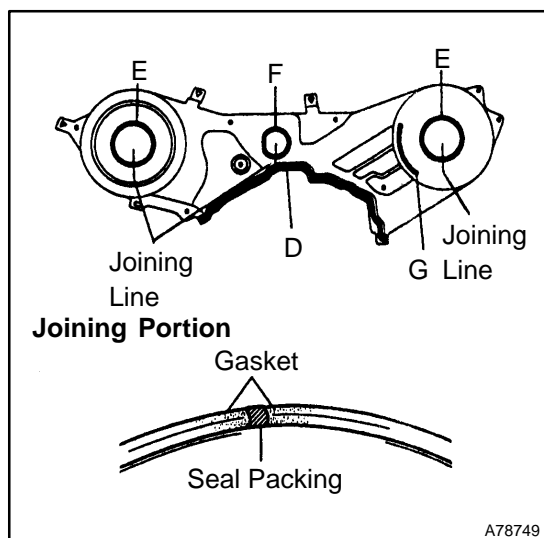

- (2) Remove the backing paper from a new gasket, and affix the gasket along the groove of the timing belt cover, as shown in the illustration.

**NOTICE:**

- **Affix the gasket in the center of the groove.**
- **At the corners, try to keep the gasket thickness uniform.**

**Length:**

Gasket	D	E	F	G
Specified Condition	335 mm (13.19 in.)	180 mm (7.09 in.)	133 mm (5.24 in.)	72 mm (2.83 in.)


- (3) If there is a gap on the joint of the gasket, apply seal packing to close the gap.

**Seal packing: Part No. 08826-00080 or equivalent**

**NOTICE:**

**When applying the seal packing, apply it as wide and high as the gasket.**


- (d) Install the timing belt cover with the 6 bolts.
- Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)**

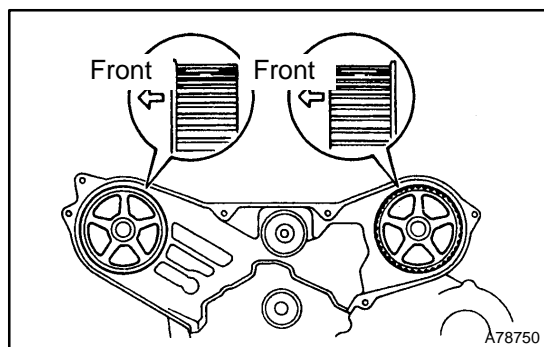**38. INSTALL CAMSHAFT TIMING PULLEY**

- (a) Install the camshaft timing pulley with the belt guide properly oriented and tighten the bolt temporarily.

**HINT:**

- Face the belt guide of the RH timing pulley towards the front of the engine.
- Face the belt guide of the LH timing pulley towards the rear of the engine.

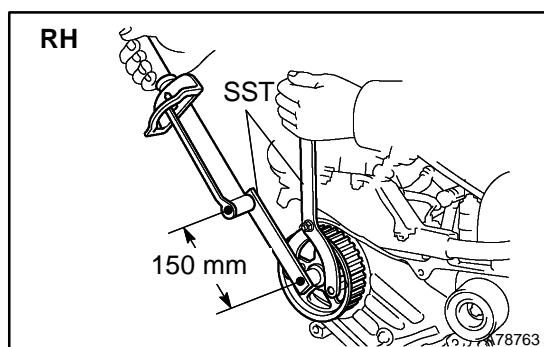

- (b) Using SST, tighten the RH pulley bolt.  
SST 09960-10010 (09962-01000, 09963-01000),  
09249-63010


**Torque: 125 N·m (1,275 kgf·cm, 92 ft·lbf)**

**NOTICE:**

The torque specification above is for the SST without extension tool specification. Use the special formula to calculate the SST with extension tool torque specification (see page 01-5).

**Extended length of SST (09249-63010):**

**150 mm (5.91 in.)**

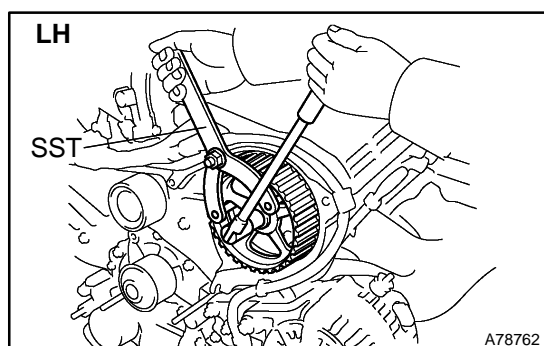

- (c) Using SST, tighten the LH pulley bolt.  
SST 09960-10010 (09962-01000, 09963-01000)

**Torque: 125 N·m (1,275 kgf·cm, 92 ft·lbf)**

**39. INSTALL TIMING BELT IDLER SUB-ASSY NO.2**

**Torque: 43 N·m (438 kgf·cm, 32 ft·lbf)**

**40. INSPECT TIMING BELT (See page 14-206 )**

**41. INSTALL TIMING BELT (See page 14-206 )**

**42. INSTALL TIMING BELT TENSIONER ASSY (See page 14-206 )**

**43. INSTALL TIMING BELT GUIDE NO.2 (See page 14-206 )**

**44. INSTALL ENGINE MOUNTING BRACKET RH**

**Torque: 28 N·m (286 kgf·cm, 21 ft·lbf)**

**45. INSTALL TIMING BELT NO.2 COVER (See page 14-206 )**

**46. INSTALL TIMING BELT NO.1 COVER (See page 14-206 )**

**47. INSTALL CRANKSHAFT PULLEY (See page 14-173 )**

**48. INSTALL GENERATOR BRACKET NO.2**

**Torque: 28 N·m (286 kgf·cm, 21 ft·lbf)**

**49. INSTALL ENGINE MOUNTING STAY NO.2 RH (See page 14-149 )**

**50. INSTALL ENGINE MOVING CONTROL ROD (See page 14-149 )**

**51. INSPECT VALVE CLEARANCE (See page 14-127 )**

**52. ADJUST VALVE CLEARANCE (See page 14-127 )**

**53. INSTALL VANE PUMP V BELT (See page 14-125 )**

**54. INSTALL V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1  
(See page 14-125 )**

**55. INSPECT DRIVE BELT TENSION (See page 14-121 )**

**56. INSTALL CYLINDER HEAD COVER SUB-ASSY LH (See page 14-173 )**

**57. INSTALL IGNITION COIL ASSY**

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

**58. INSTALL RADIATOR HOSE INLET**

- 59. INSTALL V-BANK COVER SUB-ASSY (See page [14-149](#) )
- 60. INSTALL FRONT SUSPENSION BRACE SUB-ASSY UPPER CENTER  
Torque: 80 N·m (816 kgf·cm, 59 ft·lbf)
- 61. INSTALL COWL PANEL SUB-ASSY
- 62. INSTALL WINDSHIELD WIPER LINK ASSY (See page [66-7](#) )
- 63. INSTALL COWL TOP VENTILATOR LOUVER SUB-ASSY (See page [66-7](#) )
- 64. INSTALL FR WIPER ARM LH (See page [66-7](#) )
- 65. INSTALL FR WIPER ARM RH (See page [66-7](#) )
- 66. INSTALL FRONT WHEEL RH
- 67. ADD ENGINE COOLANT (See page [16-26](#) )
- 68. CHECK FOR ENGINE COOLANT LEAKS (See page [16-20](#) )