

REPLACEMENT

HINT:

The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.

1. **DRAIN ENGINE COOLANT (See page 16-26)**
2. **DISCONNECT RADIATOR RESERVE TANK HOSE OR PIPE**
3. **DISCONNECT RADIATOR HOSE INLET**
4. **DISCONNECT RADIATOR HOSE OUTLET**
5. **DISCONNECT OIL COOLER OUTLET HOSE NO. 2**
6. **DISCONNECT OIL COOLER OUTLET HOSE NO. 3**
7. **REMOVE RADIATOR SUPPORT UPPER**
 - (a) Remove the radiator support upper with the 2 bolts.
8. **REMOVE RADIATOR ASSY**
 - (a) Disconnect the fan motor connector.
 - (b) Disconnect the ECT switch No. 1 connector.
 - (c) Remove the radiator from the body.
9. **REMOVE RADIATOR SUPPORT LOWER**
10. **REMOVE FAN ASSY W/MOTOR**
 - (a) Remove the 6 bolts and fan from the radiator.
11. **INSTALL FAN ASSY W/MOTOR**
 - (a) Install the fan w/ to the radiator with the 6 bolts.
Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)
12. **INSTALL RADIATOR ASSY**
 - (a) Install the radiator to the body.
 - (b) Connect the ECT switch No. 1 connector.
 - (c) Connect the fan motor connector.
13. **INSTALL RADIATOR SUPPORT UPPER**
 - (a) Install the radiator support upper with the 2 bolts.
Torque: 12.8 N·m (130 kgf·cm, 9 ft·lbf)
14. **ADD ENGINE COOLANT (See page 16-26)**
15. **CHECK FOR ENGINE COOLANT LEAKS (See page 16-20)**