


CRANKSHAFT POSITION SENSOR (2AZ-FE) REPLACEMENT

18093-02


HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

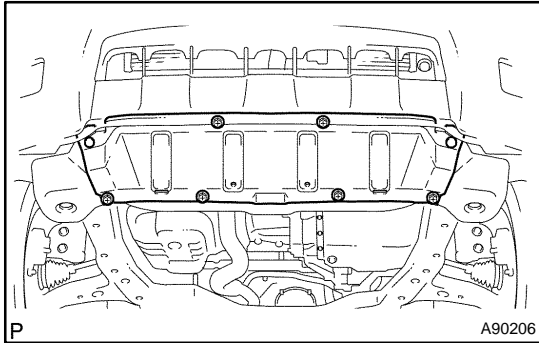


1. REMOVE ENGINE UNDER COVER NO.1

- (a) Remove the 6 screws, 2 clips and under cover.

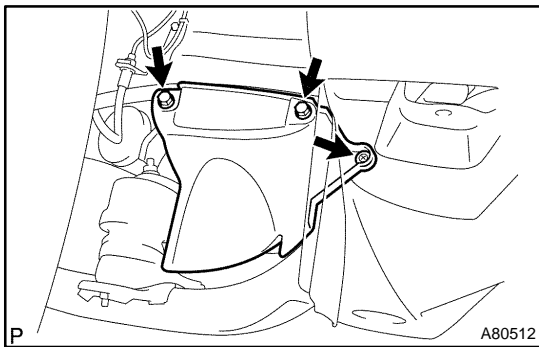

2. REMOVE FRONT FENDER APRON SEAL RH

- (a) Remove the clip, 2 bolts and apron seal.

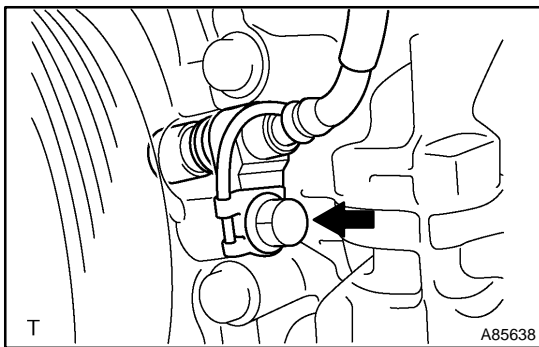

3. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the sensor connector.
(b) Remove the bolt, clamp and sensor.

4. INSTALL CRANKSHAFT POSITION SENSOR

- (a) Install the sensor and clamp with the bolt.
Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)
(b) Connect the sensor connector.

5. INSTALL FRONT FENDER APRON SEAL RH

- (a) Install the clip, 2 bolts and apron seal.

6. INSTALL ENGINE UNDER COVER NO.1

- (a) Install the 6 screws, 2 clips and under cover.