



## REPLACEMENT

### 1. REMOVE V BELT (See page 14-5 )

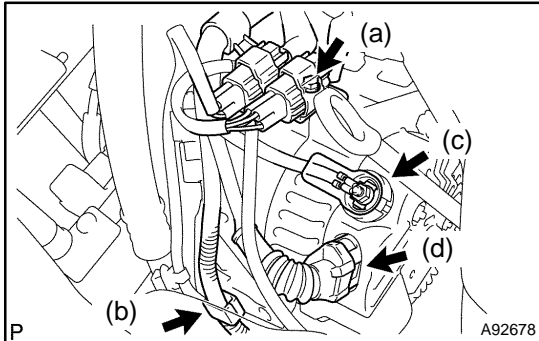

### 2. REMOVE GENERATOR ASSY

- (a) Remove the bolt, and disconnect the wire clip on the wire connectors from the generator.
- (b) Disconnect the wire clamp from the wire clip.
- (c) Remove the cap and nut, and disconnect the generator wire.
- (d) Disconnect the generator connector.

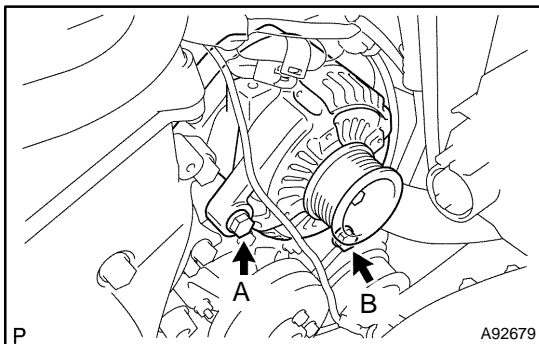

- (e) Remove the 2 bolts and generator.

### 3. INSTALL GENERATOR ASSY

- (a) Install the generator.


#### Torque:

**52 N·m (530 kgf·cm, 38 ft·lbf) for bolt A**

**21 N·m (214 kgf·cm, 15 ft·lbf) for bolt B**

#### NOTICE:

**Be careful not to put the wire harness between the engine and the generator when install the generator.**

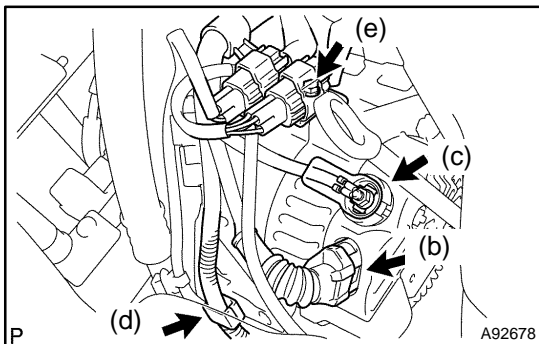

- (b) Connect the generator connector.
- (c) Connect the generator wire with the nut, and install the cap.
- Torque: 9.8 N·m (100 kgf·cm, 7.0 ft·lbf)**
- (d) Install the wire clamp to the wire clip.
- (e) Install the wire clip on the wire connectors to the generator.

### 4. INSTALL V BELT (See page 14-5 )