

# REAR SUSPENSION ARM ASSY NO.2 LH (FF)


## REPLACEMENT

27010-01

HINT:


COMPONENTS: See page 27-2 .

### 1. REMOVE REAR WHEEL

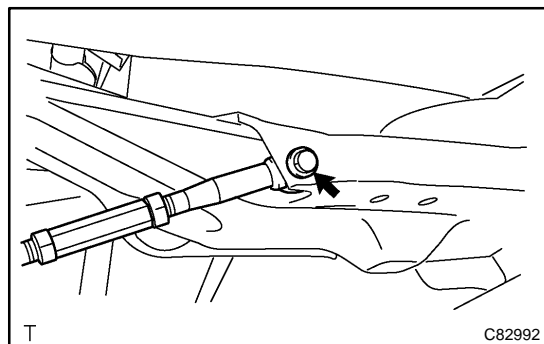

### 2. REMOVE REAR SUSPENSION ARM ASSY NO.2 LH


- Support the rear axle carrier with a jack.
- Remove the bolt, and disconnect the rear suspension arm assy No.2 (inner side).

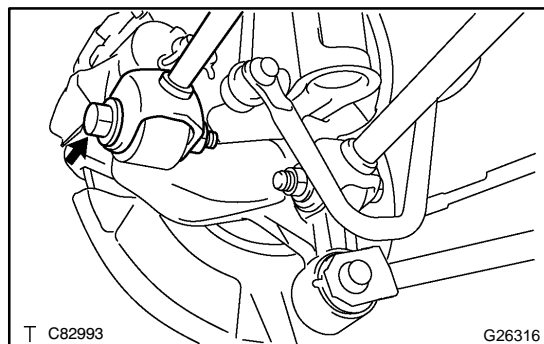

- Remove the bolt, nut and the rear suspension arm assy No.2 (outer side) from the rear axle carrier.

#### NOTICE:

When removing the bolt, keep the nut from rotating.

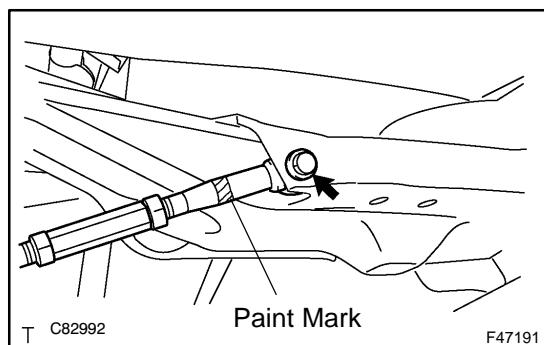


### 3. TEMPORARILY TIGHTEN REAR SUSPENSION ARM ASSY NO.2 LH

- Install the rear suspension arm assy No.2 (inner side) with the bolt, and temporarily tighten the bolt.

#### HINT:


Ensure that the paint mark on the rear suspension arm assy No.2 faces the rear side of the vehicle.

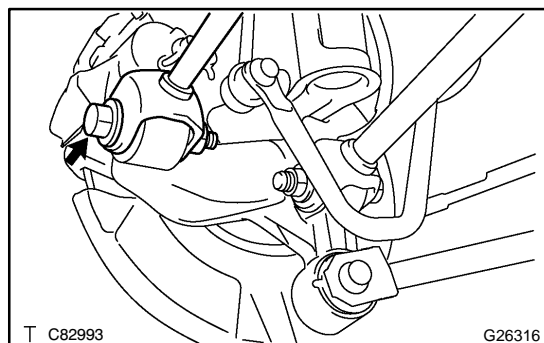


- Connect the rear suspension arm assy No.2 (outer side) to the rear axle carrier with the bolt and nut, and temporarily tighten the bolt.

#### NOTICE:

When installing the bolt, fix the nut and temporarily tighten the bolt.

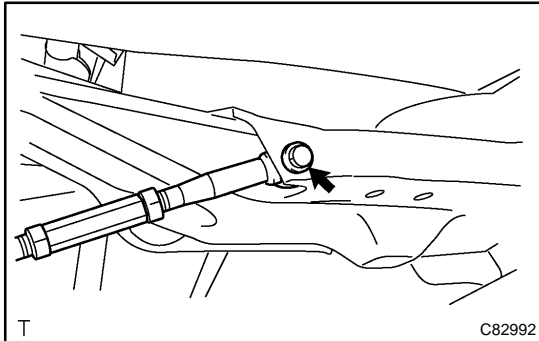**4. STABILIZE SUSPENSION (SEE PAGE 27-13 )****5. FULLY TIGHTEN REAR SUSPENSION ARM ASSY NO.2 LH**

(a) Fully tighten the bolt.

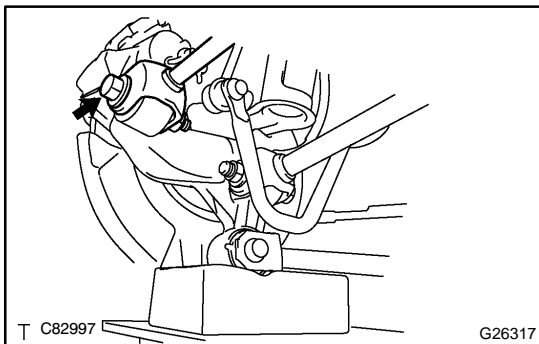**Torque: 120 N·m (1,220 kgf·cm, 89 ft·lbf)**

(b) Fully tighten the bolt.

**Torque: 112 N·m (1,140 kgf·cm, 83 ft·lbf)****6. INSTALL REAR WHEEL****Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)****7. INSPECT REAR WHEEL ALIGNMENT (SEE PAGE 27-5 )**