

FRONT AXLE LH HUB BOLT REPLACEMENT


3000J-01

HINT:


COMPONENTS:SEE PAGE 30-4

Replace the RH side by the same procedures with LH side.

1. REMOVE FRONT WHEEL
2. SEPARATE FRONT DISC BRAKE CALIPER ASSY LH(SEE PAGE 30-38)
3. REMOVE FRONT DISC

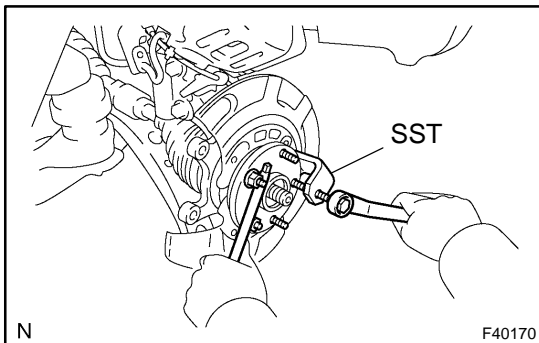

4. REMOVE FRONT AXLE LH HUB BOLT
 - (a) Using SST and a screwdriver or an equivalent to hold, remove the hub bolt.
SST 09628-1001 1

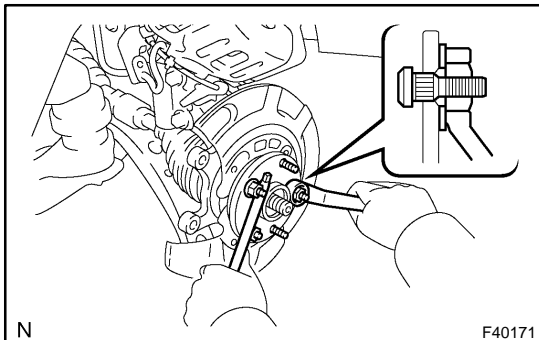

5. INSTALL FRONT AXLE LH HUB BOLT
 - (a) Install a washer and nut to a new hub bolt as shown in the illustration.
 - (b) Using a screwdriver to hold, install the hub bolt by torquing the nut.
6. INSTALL FRONT DISC
7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH (SEE PAGE 30-38)
8. INSTALL FRONT WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)