

REAR AXLE LH HUB BOLT REPLACEMENT


3000P-02

HINT:


COMPONENTS:SEE PAGE 30-4

Replace the RH side by the same procedures with the LH side.

1. **REMOVE REAR WHEEL**
2. **SEPARATE REAR DISC BRAKE CALIPER ASSY LH (2WD DRIVE TYPE)**
 - (a) Remove the 2 bolts and brake caliper.
 - (b) Support the brake caliper securely.
3. **SEPARATE REAR DISC BRAKE CALIPER ASSY LH (4WD DRIVE TYPE)**
4. **REMOVE REAR DISC (SEE PAGE 32-29)**

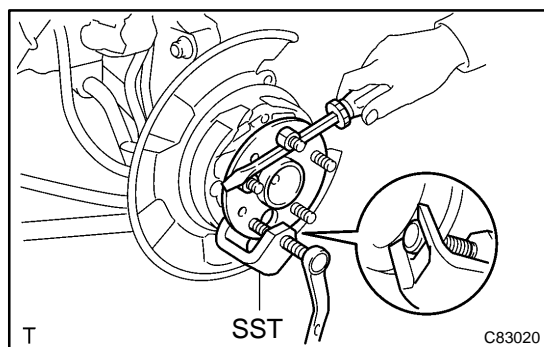

5. **REMOVE REAR AXLE LH HUB BOLT**
 - (a) Using SST and a screwdriver or an equivalent to hold, remove the hub bolt.
SST 09628-1001 1

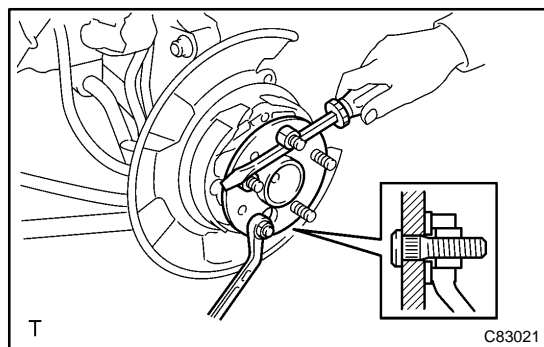

6. **INSTALL REAR AXLE LH HUB BOLT**
 - (a) Install a washer and nut to a new hub bolt as shown in the illustration.
 - (b) Using a screwdriver to hold, install the hub bolt by torquing the nut.
7. **INSTALL REAR DISC (SEE PAGE 32-29)**
8. **INSTALL REAR DISC BRAKE CALIPER ASSY LH (2WD DRIVE TYPE)**
 - (a) Install the brake caliper with the 2 bolts.
Torque:
2WD: 61.8 N·m (630 kgf·cm, 46 ft·lbf)
9. **INSTALL REAR DISC BRAKE CALIPER ASSY LH (4WD DRIVE TYPE)**
 - (a) Install the brake caliper with the 2 bolts.
Torque:
4WD: 58 N·m (592 kgf·cm, 43 ft·lbf)
10. **INSTALL REAR WHEEL**