

SPEED SENSOR REAR LH (4WD)


REPLACEMENT

320WP-03

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE DECK TRIM SIDE PANEL ASSY LH (SEE PAGE 76-21)
2. REMOVE REAR WHEEL

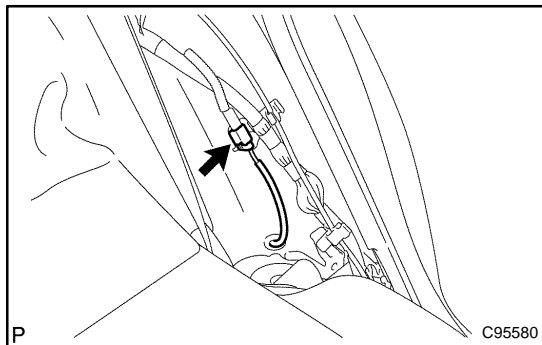


3. REMOVE SPEED SENSOR REAR LH

- (a) Disconnect the speed sensor connector.

NOTICE:

Be careful not to damage the wire harness.

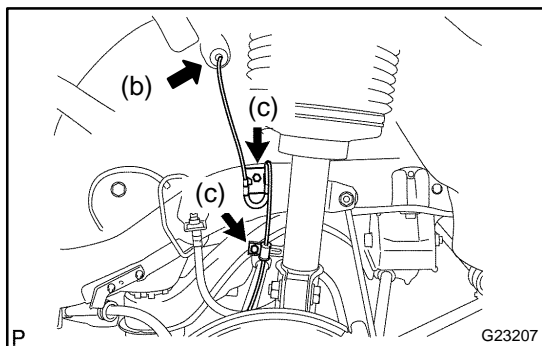


- (b) Pull out the sensor wire harness with the grommet.

NOTICE:

Do not pull sensor wire.


- (c) Remove the 2 bolts holding the sensor harness from the body and the shock absorber assy.

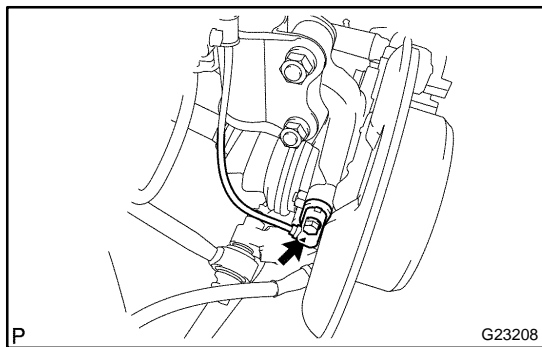

- (d) Remove the bolt and the speed sensor rear.

NOTICE:

Prevent foreign matter from attaching to the sensor tip.

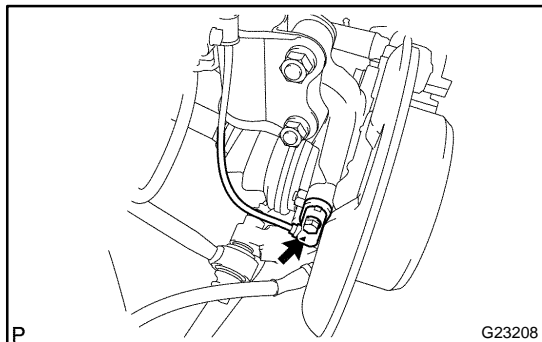


4. INSTALL SPEED SENSOR REAR LH

- (a) Install the speed sensor rear with the bolt.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

NOTICE:

Prevent foreign matter from attaching to the sensor tip.

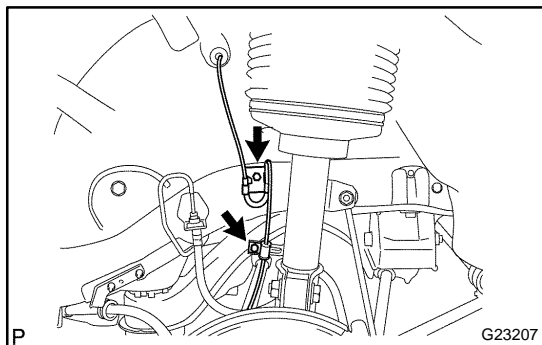

- (b) Install the sensor harness clamps with the 2 bolts to the body and the shock absorber assy.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)


NOTICE:

Do not twist the sensor wire when installing the sensor.

- (c) Push in the sensor wire harness with grommet.

NOTICE:

When grommet is set to body, pull the grommet. Do not pull sensor wire.

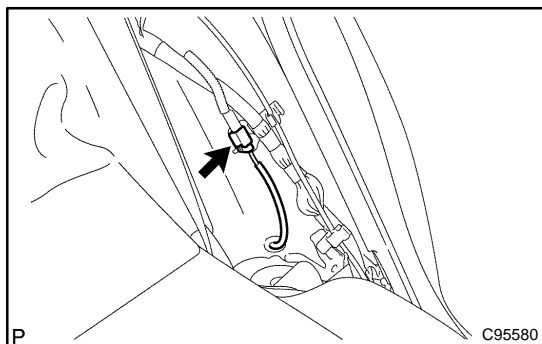

- (d) Connect the speed sensor connector.

5. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

6. INSTALL DECK TRIM SIDE PANEL ASSY LH

7. CHECK ABS SPEED SENSOR SIGNAL (SEE PAGE [05-765](#))