



YAWRATE SENSOR REPLACEMENT

NOTICE:

- Do not use the yawrate sensor if it is dropped or damaged.
 - Prevent foreign matter from attaching between the yawrate sensor bracket and body.
 - Confirm the sensor direction is correct.
1. REMOVE FRONT SEAT ASSEMBLY RH (SEE PAGE 72-11 or 72-19)
 2. REMOVE FRONT DOOR SCUFF PLATE RH (SEE PAGE 76-21)
 3. REMOVE REAR DOOR SCUFF PLATE RH (SEE PAGE 76-21)
 4. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76-21)
 5. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH (SEE PAGE 76-21)
 6. REMOVE CENTER PILLAR GARNISH LOWER RH (SEE PAGE 76-21)

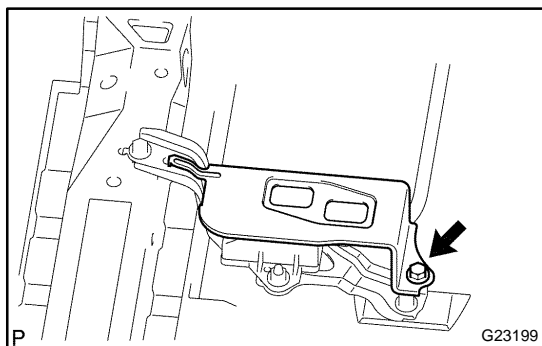


7. REMOVE YAWRATE SENSOR PROTECTOR
 - (a) Remove the bolt and the sensor protector.

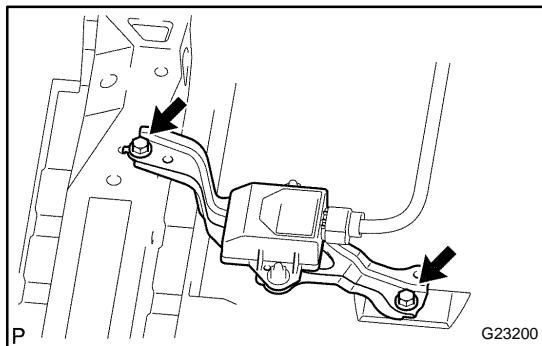


8. REMOVE YAWRATE SENSOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 bolts and the yawrate sensor.

NOTICE:

Do not remove the yawrate sensor from the yawrate sensor bracket.

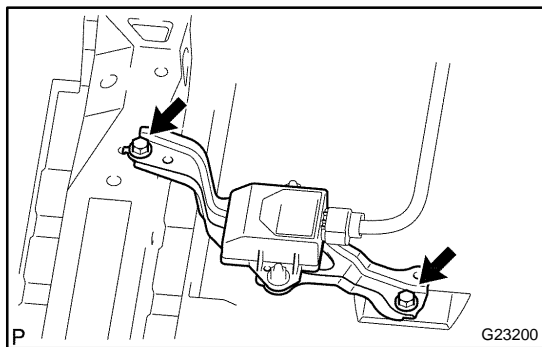

9. INSTALL YAWRATE SENSOR
 - (a) Install the yawrate sensor with the 2 bolts.
Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)
 - (b) Connect the connector.

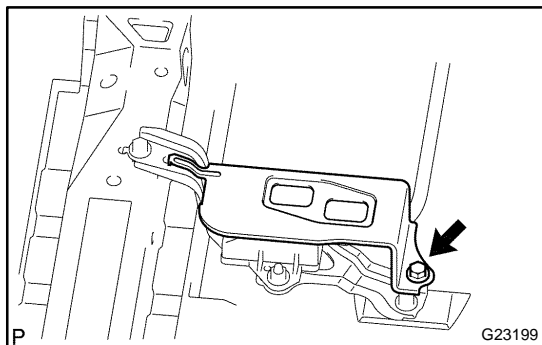**10. INSTALL YAWRATE SENSOR PROTECTOR**

(a) Install the sensor protector with the bolt.

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

11. **INSTALL CENTER PILLAR GARNISH LOWER RH**
12. **INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH**
13. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH**
14. **INSTALL REAR DOOR SCUFF PLATE RH**
15. **INSTALL FRONT DOOR SCUFF PLATE RH**
16. **INSTALL FRONT SEAT ASSEMBLY RH (SEE PAGE [72-11](#) or [72-19](#))**
17. **PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION (SEE PAGE [05-765](#))**
18. **CHECK IN THE TEST MODE (SEE PAGE [05-765](#))**