


STEERING SENSOR REPLACEMENT


320WR-05

1. PRECAUTION (SEE PAGE 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE HORN BUTTON ASSY (SEE PAGE 60-17)
5. REMOVE STEERING WHEEL ASSY (SEE PAGE 50-8)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
6. REMOVE STEERING COLUMN COVER UPR (SEE PAGE 50-8)
7. REMOVE SPIRAL CABLE SUB-ASSY (SEE PAGE 60-26)

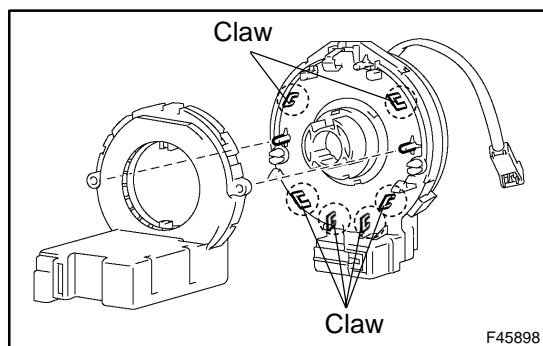

8. REMOVE STEERING SENSOR

- (a) Release 6 claw fittings and remove the steering sensor from the spiral cable.

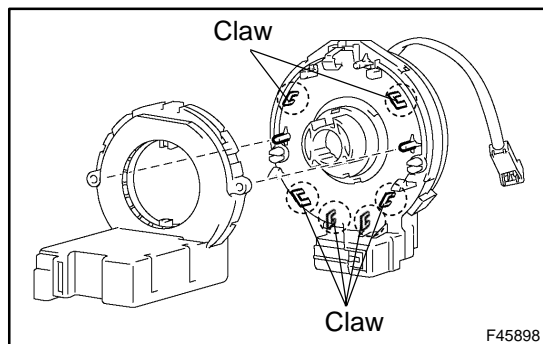

9. INSTALL STEERING SENSOR

- (a) Install the steering sensor to the spiral cable.

NOTICE:

- Install the claw securely.
- Do not damage the claw.

10. ADJUST CENTER FRONT WHEEL
11. INSTALL SPIRAL CABLE SUB-ASSY (SEE PAGE 60-26)
12. CENTER SPIRAL CABLE (SEE PAGE 60-26)
13. INSTALL STEERING WHEEL ASSY (SEE PAGE 50-8)
14. INSTALL HORN BUTTON ASSY (SEE PAGE 60-17)
15. INSPECT STEERING WHEEL CENTER POINT
16. INSPECT HORN BUTTON ASSY (SEE PAGE 60-1 1)
17. CONNECT BATTERY NEGATIVE TERMINAL
18. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207)