


REPLACEMENT

1. PRECAUTION (W/ SIDE AIRBAG) (SEE PAGE 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
3. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSY LOWER (SEE PAGE 71-10)
4. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (SEE PAGE 71-10)
5. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71-10)
6. REMOVE FLOOR CARPET COVER CENTER RH (SEE PAGE 71-10)
7. REMOVE FLOOR CARPET COVER CENTER LH (SEE PAGE 71-10)
8. REMOVE FRONT SEAT ASSEMBLY RH
9. REMOVE FRONT SEAT ASSEMBLY LH (SEE PAGE 72-1 1, 72-19)
10. REMOVE CONSOLE BOX ASSY (SEE PAGE 71-10)
11. REMOVE FR FLOOR FOOTREST (SEE PAGE 33-5)
12. REMOVE PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33-5)

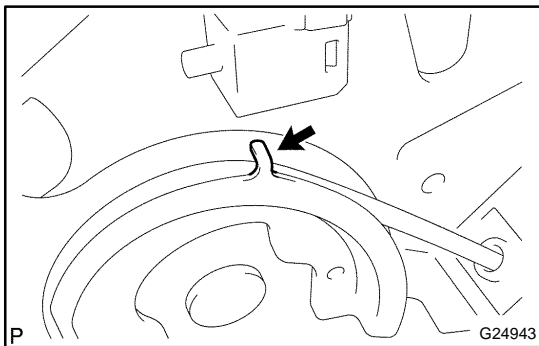


13. REMOVE PARKING BRAKE CABLE ASSY NO.1


- (a) Using a screwdriver, disengage the claw.

NOTICE:

Be careful not to damage the parking brake cable assy No.1.

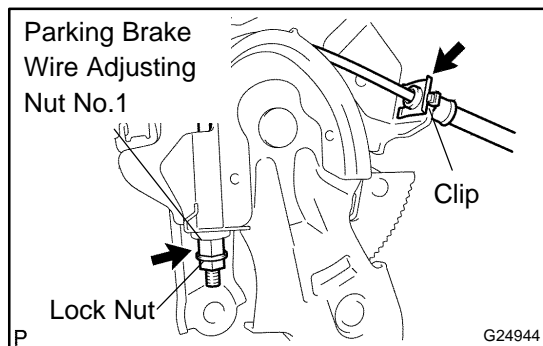


- (b) Remove the clip from the parking brake pedal assy.
- (c) Remove the lock nut and parking brake wire adjusting nut No.1.

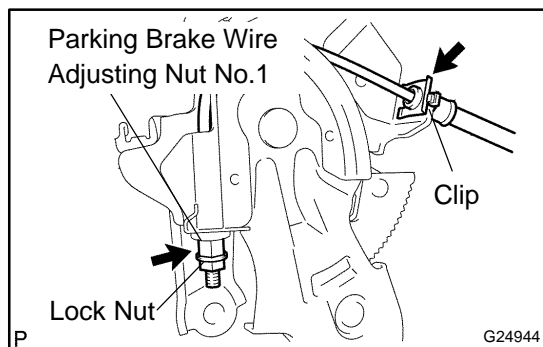

14. INSTALL PARKING BRAKE CABLE ASSY NO.1

- (a) Install the parking brake cable assy No.1 with the clip.
- (b) Temporarily install the parking brake wire adjusting nut No.1 and lock nut.

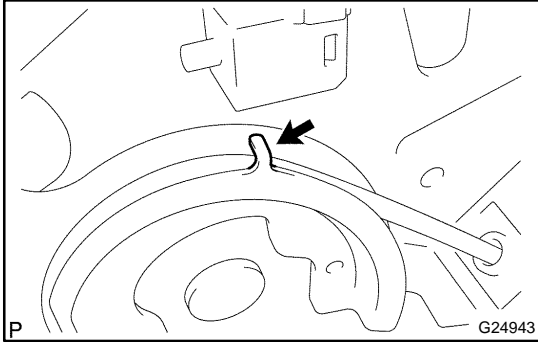

(c) Bend the claw.

NOTICE:

Bend the claw fully.

15. INSTALL PARKING BRAKE CONTROL PEDAL ASSY (SEE PAGE 33-5)
16. INSTALL FR FLOOR FOOTREST (SEE PAGE 33-5)
17. INSTALL FRONT SEAT ASSEMBLY RH
18. INSTALL FRONT SEAT ASSEMBLY LH (SEE PAGE 72-1 1, 72-19)
19. REMOVE REAR WHEEL
20. ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 33-19)
21. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
22. INSPECT PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33-2)
23. ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33-2)
24. CONNECT BATTERY NEGATIVE TERMINAL
25. INSPECT SRS WARNING LIGHT (W/ SIDE AIRBAG) (SEE PAGE 05-1207)