

## REPLACEMENT

### HINT:

For parking brake cable No.2, employ the same procedure to the No.3 side.

#### 1. REMOVE REAR WHEEL

#### 2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH

(a) Remove the 2 bolts and separate the rear disc brake caliper assy LH.

### HINT:

Do not disconnect the flexible hose from the rear brake caliper assy LH.

#### 3. REMOVE REAR DISC (SEE PAGE 33-19 )

#### 4. REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (SEE PAGE 33-19 )

#### 5. REMOVE PARKING BRAKE SHOE STRUT LH (SEE PAGE 33-19 )

#### 6. REMOVE PARKING BRAKE SHOE ASSY LH NO.1 (SEE PAGE 33-19 )


#### 7. REMOVE PARKING BRAKE SHOE ADJUSTING SCREW SET (SEE PAGE 33-19 )

#### 8. REMOVE PARKING BRAKE SHOE ASSY LH NO.2 (SEE PAGE 33-19 )

#### 9. SEPARATE SPEED SENSOR REAR LH (4WD DRIVE TYPE) (SEE PAGE 30-60 )

#### 10. REMOVE REAR AXLE SHAFT LH NUT (4WD DRIVE TYPE) (SEE PAGE 30-60 )


#### 11. REMOVE REAR AXLE HUB & BEARING ASSY LH (4WD DRIVE TYPE) (SEE PAGE 30-60 )

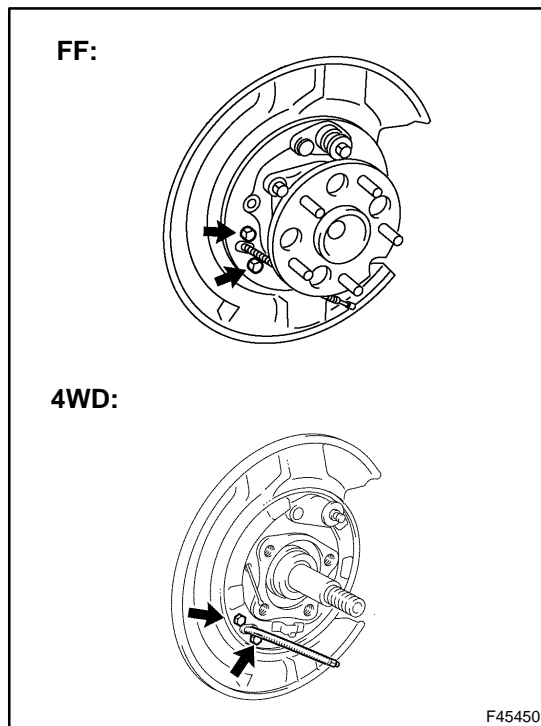

#### 12. REMOVE PARKING BRAKE CABLE ASSY NO.3

(a) Remove the 2 bolts and separate the parking brake cable assy No.3 from the backing plate.

- (b) Remove the 4 nuts and 2 bolts and separate the parking brake cable assy No.3 from the body.
- (c) Separate the parking brake cable assy No.3 from the equalizer and remove the parking brake cable assy No.3.
- (d) Remove the parking brake cable support bracket No.1 from the parking brake cable assy No.3.

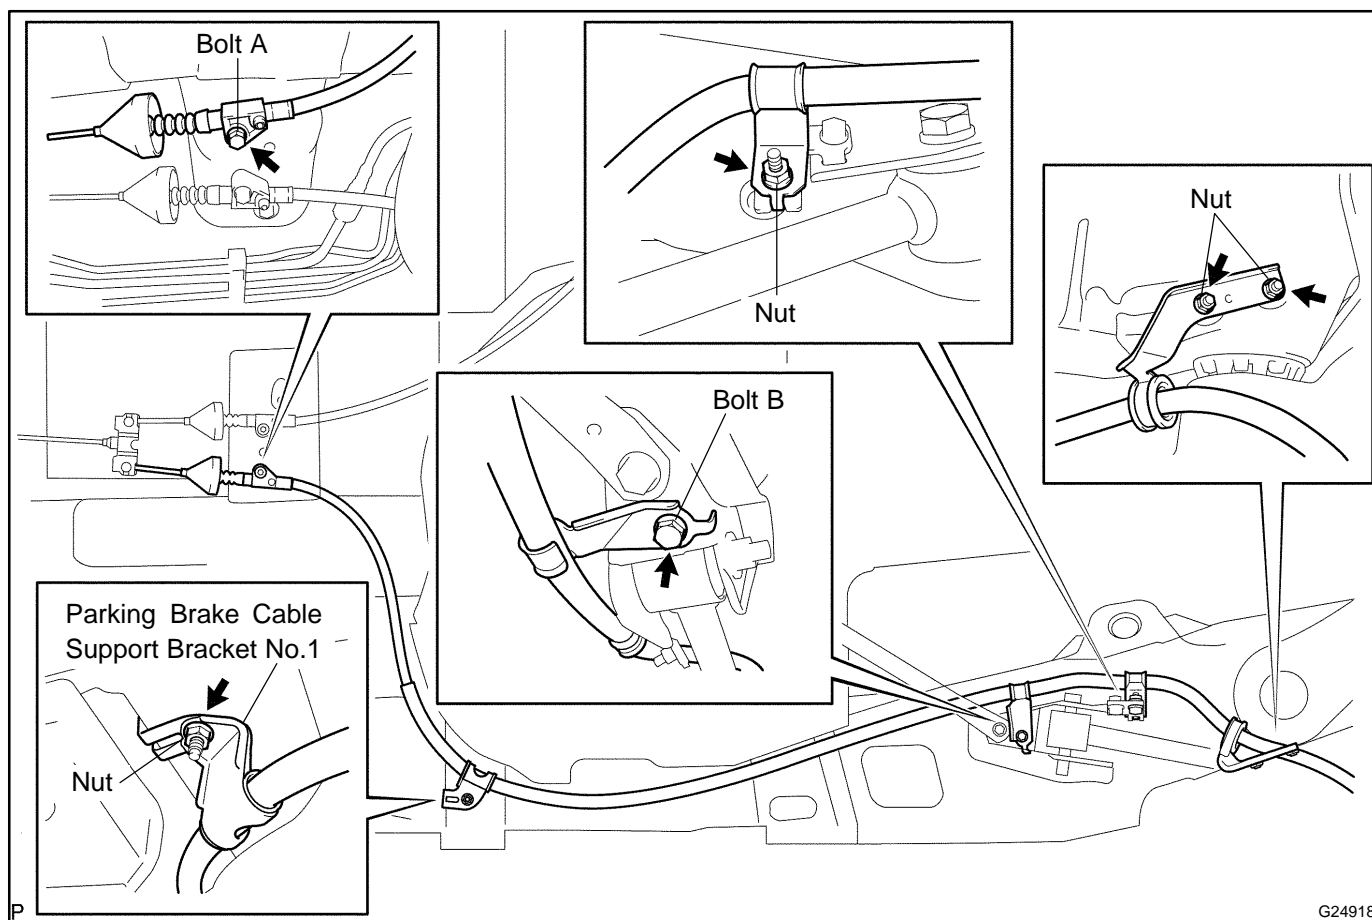

### 13. INSTALL PARKING BRAKE CABLE ASSY NO.3


- (a) Attach the parking brake cable support bracket No.1 to the parking brake cable assy No.3.
- (b) Connect the parking brake cable assy No.3 to the equalizer and slide boot stopper of No.1 cable should be inserted into groove of T-Metal fitting.
- (c) Install the 4 nuts, 2 bolts and parking brake cable assy No.3 to the body.

#### Torque:

**Bolt A: 8.5 N·m (87 kgf·cm, 75 in.-lbf)**

**Bolt B: 39 N·m (400 kgf·cm, 29 ft.-lbf)**

**Nut: 6.0 N·m (61 kgf·cm, 53 in.-lbf)**

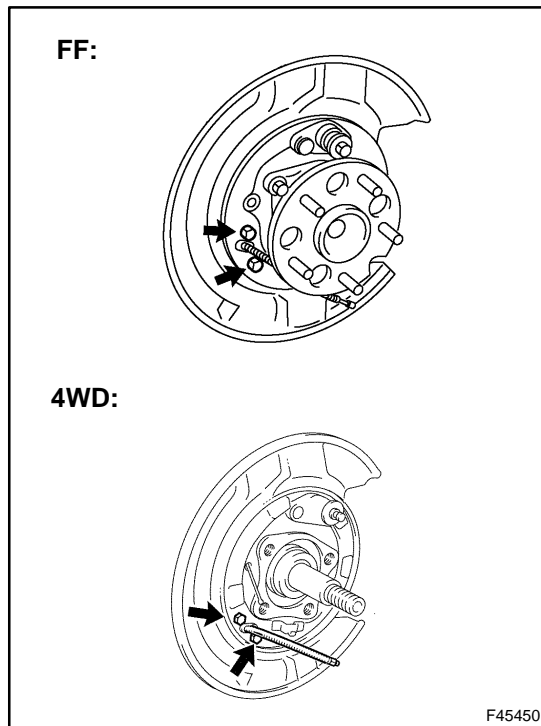

- (d) Connect the parking brake cable assy No.3 to the backing plate with the 2 bolts.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

14. APPLY HIGH TEMPERATURE GREASE (SEE PAGE 33-19 )
15. INSTALL REAR AXLE HUB & BEARING ASSY LH (4WD DRIVE TYPE) (SEE PAGE 30-60 )
16. INSTALL REAR AXLE SHAFT LH NUT (4WD DRIVE TYPE) (SEE PAGE 30-60 )
17. INSTALL SPEED SENSOR REAR LH (4WD DRIVE TYPE) (SEE PAGE 30-60 )
18. INSTALL PARKING BRAKE SHOE ASSY LH NO.2 (SEE PAGE 33-19 )
19. INSTALL PARKING BRAKE SHOE ADJUSTING SCREW SET (SEE PAGE 33-19 )
20. INSTALL PARKING BRAKE SHOE ASSY LH NO.1 (SEE PAGE 33-19 )
21. INSTALL PARKING BRAKE SHOE STRUT LH (SEE PAGE 33-19 )
22. INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (SEE PAGE 33-19 )
23. CHECK PARKING BRAKE INSTALLATION (SEE PAGE 33-19 )
24. INSPECT BEARING BACKLASH (4WD DRIVE TYPE) (SEE PAGE 30-3 )
25. INSPECT AXLE HUB DEVIATION (4WD DRIVE TYPE) (SEE PAGE 30-3 )
26. INSTALL REAR DISC
  - (a) Aligning the matchmarks, install the rear disc.
27. ADJUST PARKING BRAKE SHOE CLEARANCE (SEE PAGE 33-19 )
28. CONNECT REAR DISC BRAKE CALIPER ASSY LH
  - (a) Install the rear disc brake caliper assy LH with the 2 bolts.  
**Torque: 78 N·m (800 kgf·cm, 58 ft·lbf)**
29. INSTALL REAR WHEEL  
**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**
30. INSPECT PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33-2 )
31. ADJUST PARKING BRAKE PEDAL TRAVEL (SEE PAGE 33-2 )
32. CHECK ABS SPEED SENSOR SIGNAL (4WD DRIVE TYPE) (SEE PAGE 05-765 )