


FRONT DIFFERENTIAL OIL SEAL (U151E)

40066-10


REPLACEMENT

1. REMOVE FRONT WHEELS
2. REMOVE ENGINE UNDER COVER NO.1
3. DRAIN AUTOMATIC TRANSAXLE FLUID
 - (a) Remove the drain plug, gasket and drain ATF.
 - (b) Install a new gasket and the drain plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
4. REMOVE FRONT DRIVE SHAFT ASSY LH (SEE PAGE 30-21)
SST 09520-01010, 09520-24010 (09520-32040)
5. REMOVE FRONT DRIVE SHAFT ASSY RH (2WD DRIVE TYPE) (SEE PAGE 30-21)

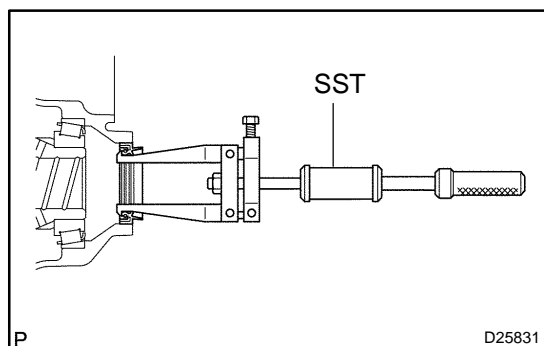


6. REMOVE TRANSAXLE HOUSING OIL SEAL

- (a) Using SST, pull out the oil seal.
SST 09308-00010

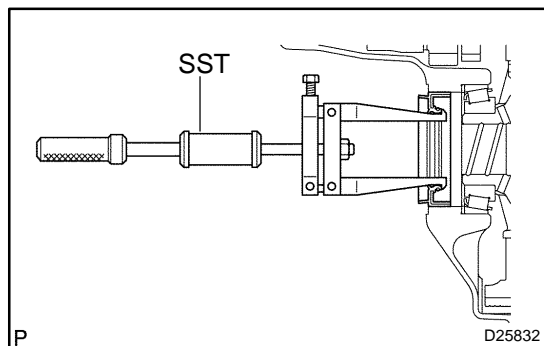


7. REMOVE DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST, pull out the oil seal.
SST 09308-00010

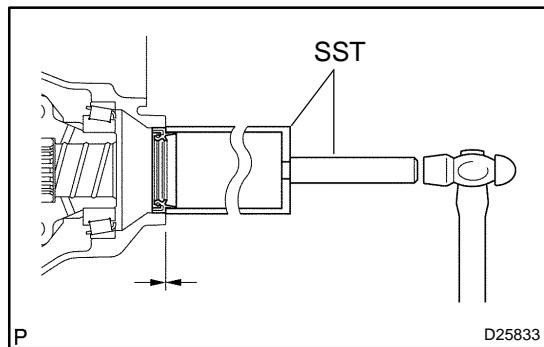

8. INSTALL TRANSAXLE HOUSING OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.
SST 09316-6001 1 (09316-00011)
Oil seal drive in depth:
0 ± 0.5 mm (0 ± 0.020 in.)
- (b) Coat the lip of the oil seal with MP grease.

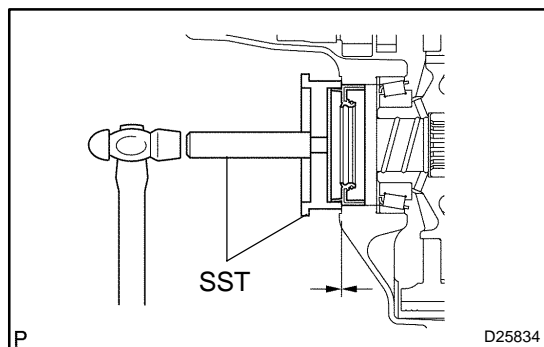

9. INSTALL DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.
SST 09223-15020, 09950-70010 (09951-07150)

Oil seal drive in depth:

0 ± 0.5 mm (0 ± 0.020 in.)

- (b) Coat the lip of the oil seal with MP grease.

10. INSTALL FRONT DRIVE SHAFT ASSY LH (SEE PAGE 30-21)

11. INSTALL FRONT DRIVE SHAFT ASSY RH (2WD DRIVE TYPE) (SEE PAGE 30-21)

12. INSTALL FRONT WHEELS

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

13. ADD AUTOMATIC TRANSAXLE FLUID

14. INSPECT AUTOMATIC TRANSAXLE FLUID (SEE PAGE 40-2)

15. INSTALL ENGINE UNDER COVER NO.1

16. CHECK ABS SPEED SENSOR SIGNAL (SEE PAGE 05-765)