


# SPEED SENSOR (U241E/U140F) REPLACEMENT


400TX-02

1. REMOVE BATTERY
2. REMOVE AIR CLEANER ASSY
3. REMOVE AIR CLEANER HOSE NO.1

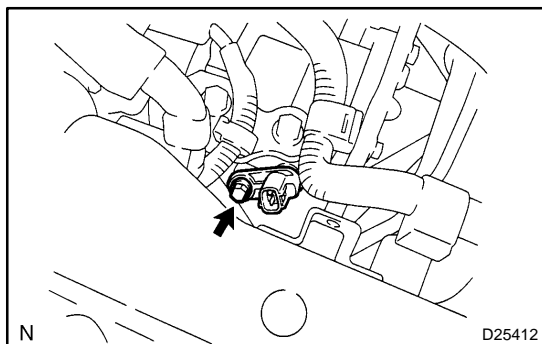


## 4. REMOVE SPEED SENSOR (NT SENSOR)

- (a) Disconnect the connector.
- (b) Remove the bolt and speed sensor.

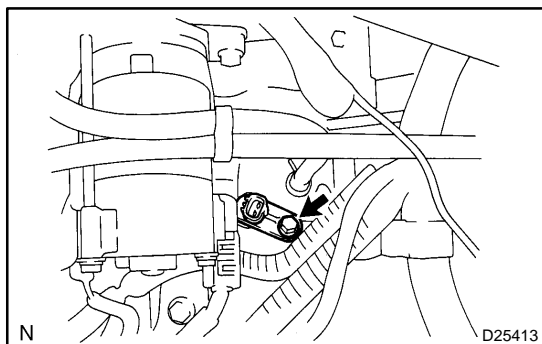

## 5. REMOVE SPEED SENSOR (NC SENSOR)

- (a) Disconnect the connector.
- (b) Remove the bolt and speed sensor.

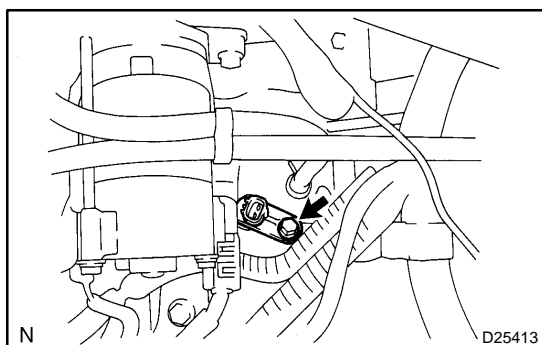


## 6. INSTALL SPEED SENSOR (NC SENSOR)

- (a) Coat O-ring with ATF.
- (b) Install the speed sensor with the bolt.  
**Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)**

### HINT:

Make sure of the manufacturer's name.

- (c) Connect the connector.

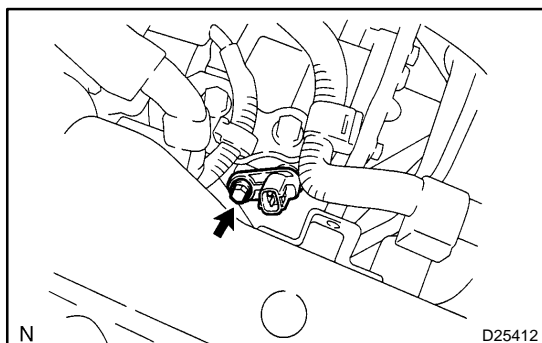

## 7. INSTALL SPEED SENSOR (NT SENSOR)

- (a) Coat O-ring with ATF.
- (b) Install the speed sensor with the bolt.  
**Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)**

### HINT:

Make sure of the manufacturer's name.

- (c) Connect the connector.

## 8. INSTALL AIR CLEANER ASSY

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**