


# FRONT DIFFERENTIAL OIL SEAL (U241E)

## REPLACEMENT


40065-09

1. REMOVE FRONT WHEELS
2. REMOVE ENGINE UNDER COVER NO.1
3. DRAIN AUTOMATIC TRANSAXLE FLUID
  - (a) Remove the drain plug, gasket and drain ATF.
  - (b) Install a new gasket and drain plug.  
**Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)**
4. REMOVE FRONT DRIVE SHAFT ASSY RH (SEE PAGE 30-21 )
5. REMOVE FRONT DRIVE SHAFT ASSY LH (SEE PAGE 30-21 )

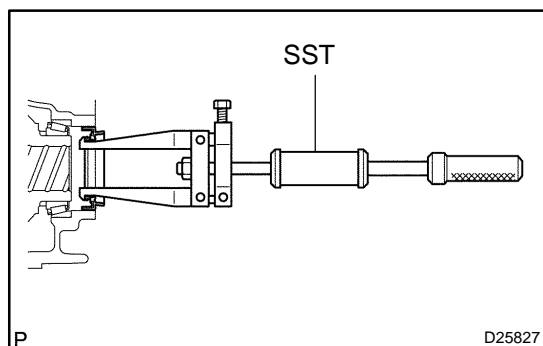


### 6. REMOVE TRANSAXLE HOUSING OIL SEAL

- (a) Using SST, pull out the oil seal.  
SST 09308-00010

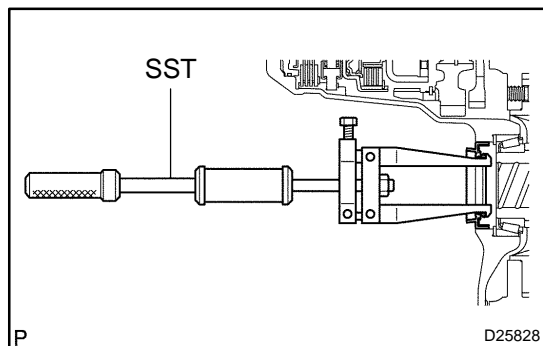


### 7. REMOVE DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL

- (a) Using SST, pull out the oil seal.  
SST 09308-00010

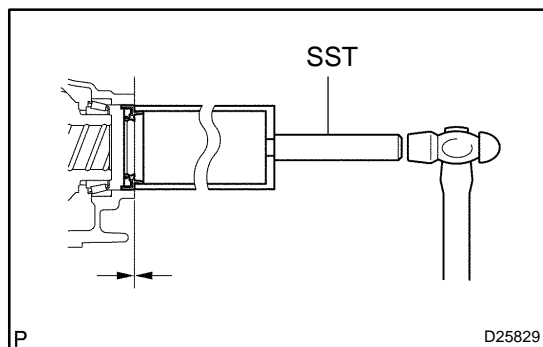

### 8. INSTALL TRANSAXLE HOUSING OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.  
SST 09316-6001 1 (09316-00011)  
**Oil seal drive in depth: 0 ± 0.5 mm (0 ± 0.020 in.)**
- (b) Coat the lip of the oil seal with MP grease.

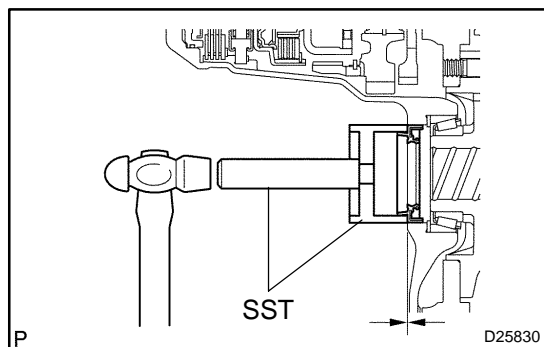

**9. INSTALL DIFFERENTIAL SIDE BEARING RETAINER OIL SEAL**

- (a) Using SST and a hammer, drive in a new oil seal.  
SST 09649-17010, 09950-70010 (09951-07150)  
**Oil seal drive in depth:  $0 \pm 0.5$  mm ( $0 \pm 0.020$  in.)**
- (b) Coat the lip of the oil seal with MP grease.

**10. INSTALL FRONT DRIVE SHAFT ASSY LH (SEE PAGE 30-21 )**

**11. INSTALL FRONT DRIVE SHAFT ASSY RH (SEE PAGE 30-21 )**

**12. INSTALL FRONT WHEELS**

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**

**13. ADD AUTOMATIC TRANSAXLE FLUID**

**14. INSPECT AUTOMATIC TRANSAXLE FLUID (SEE PAGE 40-2 )**

**15. CHECK ABS SPEED SENSOR SIGNAL**