


ON-VEHICLE INSPECTION

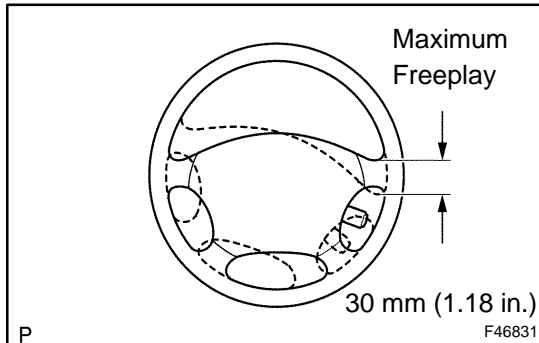

1. CHECK STEERING WHEEL FREEPLAY

- Stop the vehicle and align the tires straight ahead.
- Turn the steering wheel gently right and left, and check the steering wheel free play.

Maximum freeplay: 30 mm (1.18 in.)

If the free play exceeds the maximum, replace the steering intermediate shaft sub-assy or steering gear.