


OVERHAUL

HINT:


COMPONENTS: see page 55-40

1. REMOVE GLOVE COMPARTMENT DOOR ASSY(SEE PAGE 71-10)

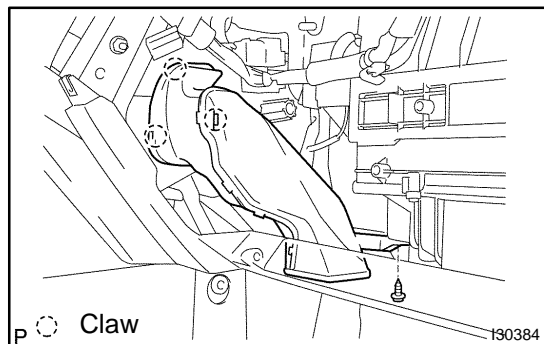

2. REMOVE AIR DUCT NO.2

- (a) Remove the screw.
- (b) Release the 3 claw fittings and remove the air duct No.2.

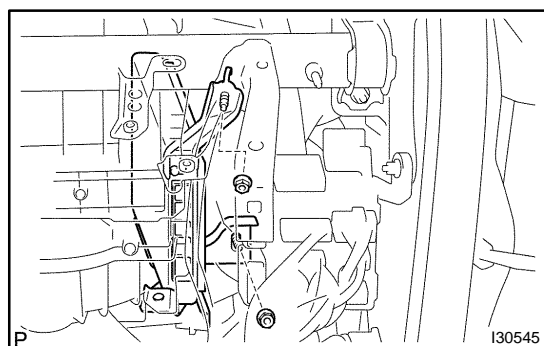


3. REMOVE ECM

- (a) Disconnect the connectors.
- (b) Remove the 2 nuts and ECM.

4. REMOVE CLEAN AIR FILTER SUB-ASSY

- (a) Release the 2 claw fittings and remove the air filter sub-assy.

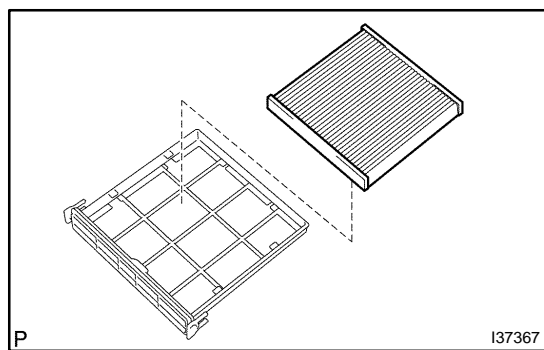



5. REMOVE CLEAN AIR FILTER

- (a) Remove the air refiner element from the air filter cover plate.


6. REMOVE BLOWER ASSY

- (a) Disconnect the connector and clamp of the cooling unit motor w/ fan sub-assy.
- (b) Disconnect the connector of the recirculation damper servo.
- (c) Remove the 2 screws and bracket.

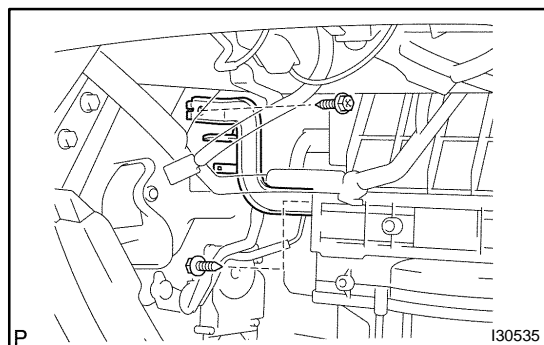

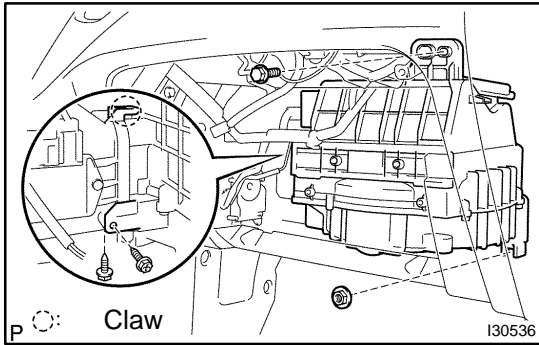


- (d) Remove the bolt, nut and 2 screws.
- (e) Disconnect the part fitted to the air conditioner radiator assy and remove the blower assy.

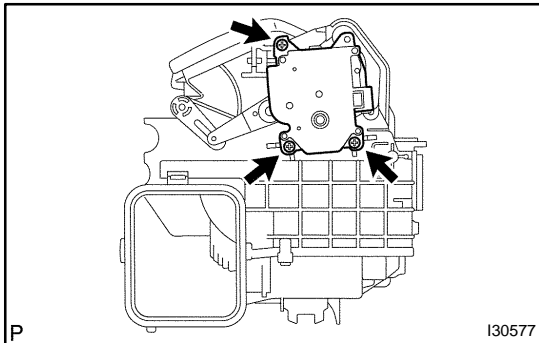


7. REMOVE RECIRCULATION DAMPER SERVO SUB-ASSY

- (a) Remove the 3 screws and air inlet servo motor (recirculation damper servo sub-assy).

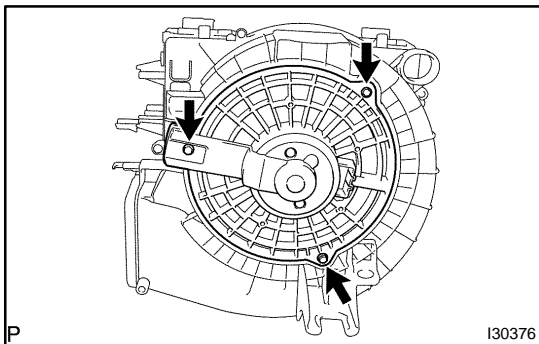

8. REMOVE COOLING UNIT MOTOR SUB-ASSY W/FAN


- (a) Remove the 3 screws and cooling unit motor servo sub-assy w/ fan.

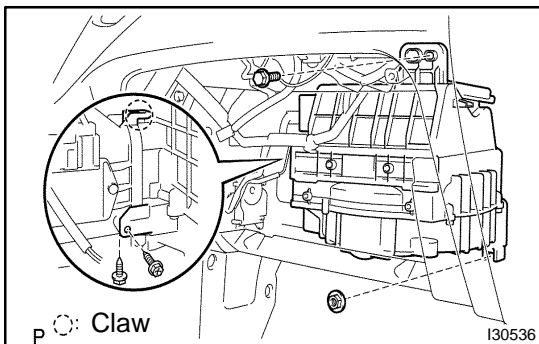


9. INSTALL BLOWER ASSY

- (a) Aligning the part to be fitted with that of the air conditioner radiator assy, install the blower assy.
- (b) Install the blower assy with the bolt, nut and 2 screws.

Torque: 9.8 N·m (100kgf·cm, 87 in.·lbf)

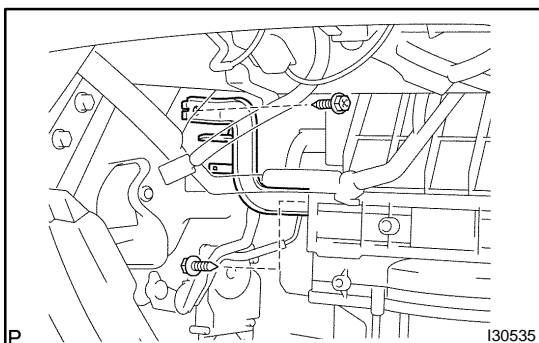

- (c) Install the bracket with the 2 screws.
- (d) Install the connector and clamp.

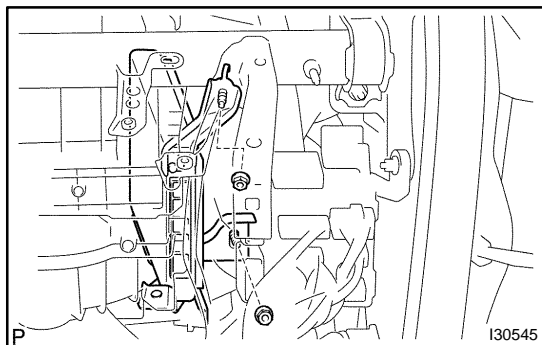**10. INSTALL ECM**

- (a) Install the ECM with the 2 nuts.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)