


REPLACEMENT

HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60-1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
3. **REMOVE GLOVE COMPARTMENT DOOR ASSY (SEE PAGE 71-10)**
4. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2 (SEE PAGE 71-10)**

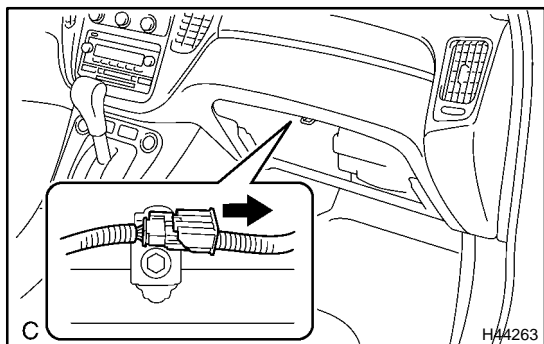


5. DISCONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

- (a) Disconnect the connector from the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

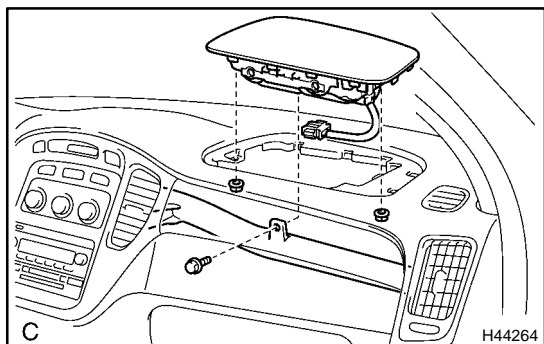

6. REMOVE FRONT PASSENGER AIRBAG ASSY

- (a) Remove the bolt and the 2 nuts.
- (b) Remove the front passenger airbag assy.

7. INSPECT FRONT PASSENGER AIRBAG ASSY (SEE PAGE 60-1 1)


8. INSTALL FRONT PASSENGER AIRBAG ASSY

- (a) Install the front passenger airbag assy with the bolt and the 2 nuts.

Torque:

Bolt: 20 N·m (204 kgf·cm, 15 ft·lbf)

Nut: 5.6 N·m (57 kgf·cm, 49 in·lbf)

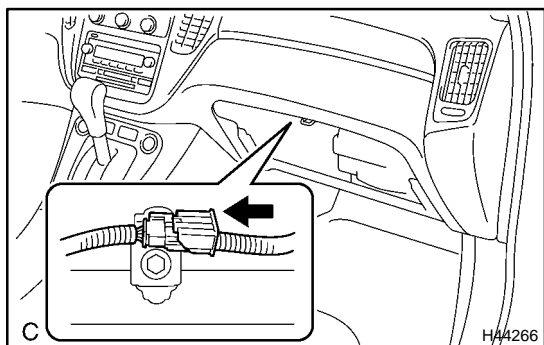

9. CONNECT FRONT PASSENGER AIRBAG ASSY CONNECTOR

- (a) Connect the connector to the front passenger airbag assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

10. CONNECT BATTERY NEGATIVE TERMINAL
11. INSPECT SRS WARNING LIGHT (SEE PAGE [05-1207](#))