


## REPLACEMENT

### HINT:

Installation is in the reverse order of removal.

1. **PRECAUTION (SEE PAGE 60-1 )**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1 )**
3. **REMOVE FLOOR CARPET COVER CENTER LH (SEE PAGE 71-10 )**
4. **REMOVE FLOOR CARPET COVER CENTER RH (SEE PAGE 71-10 )**
5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CENTER (SEE PAGE 71-10 )**
6. **REMOVE REAR CONSOLE BOX LOWER (W/ REAR SEAT ENTERTAINMENT) (SEE PAGE 71-10 )**
7. **REMOVE BOX BOTTOM MAT (SEE PAGE 71-10 )**
8. **REMOVE CONSOLE BOX ASSY (SEE PAGE 71-10 )**
9. **REMOVE AIR DUCT REAR NO.2 (SEE PAGE 55-29 )**
10. **REMOVE AIR DUCT REAR NO.1 (SEE PAGE 55-29 )**

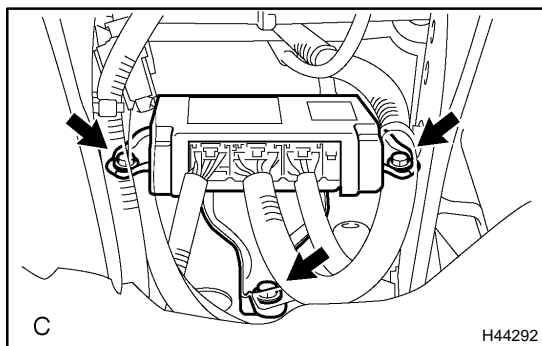

### 11. REMOVE AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the 3 connectors from the airbag sensor assy center.
- (b) Remove the 3 bolts and the airbag sensor assy center.

### 12. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

### CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Temporarily install the airbag sensor assy center with the 3 bolts.

### NOTICE:

- If the airbag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
  - When installing the airbag sensor assy center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Tighten the 3 bolts to the specified torque.  
**Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)**
  - (e) Connect the 3 connectors to the airbag sensor assy center.
  - (f) Check that there is no looseness in the installation parts of the airbag sensor assy center.
  - (g) Check that the water-proof sheet is properly set.
13. **CONNECT BATTERY NEGATIVE TERMINAL**
  14. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207 )**