


REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE FRONT BUMPER COVER (SEE PAGE 76-2)**
 4. **REMOVE RADIATOR GRILLE (SEE PAGE 76-2)**
 5. **REMOVE LH HEADLAMP ASSY (SEE PAGE 65-10)**

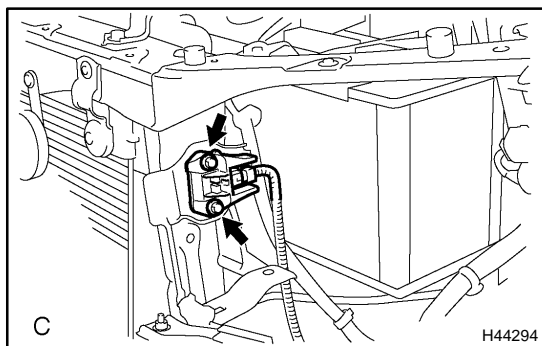

6. REMOVE AIRBAG SENSOR FRONT LH

- (a) Disconnect the connector from the airbag sensor front LH.
- (b) Remove the 2 bolts and the airbag sensor front LH.

7. INSTALL AIRBAG SENSOR FRONT LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor front LH with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)

NOTICE:

- If the airbag sensor front LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor front LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Connect the connector to the airbag sensor front LH.
 - (e) Check that there is no looseness in the installation parts of the airbag sensor front LH.
 8. **INSTALL LH HEADLAMP ASSY (SEE PAGE 65-10)**
 9. **HEADLIGHT AIM ONLY (SEE PAGE 65-14)**
 10. **CONNECT BATTERY NEGATIVE TERMINAL**
 11. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207)**