


REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE TONNEAU COVER ASSY (SEE PAGE 76-21)**
 4. **REMOVE DECK FLOOR BOX REAR (SEE PAGE 76-21)**
 5. **REMOVE REAR FLOOR FINISH PLATE (SEE PAGE 76-21)**
 6. **REMOVE DECK SIDE TRIM BOX LH (SEE PAGE 76-21)**
 7. **REMOVE DECK SIDE TRIM BOX RH (SEE PAGE 76-21)**
 8. **REMOVE DECK SIDE TRIM COVER LH (SEE PAGE 76-21)**
 9. **REMOVE ROPE HOOK (SEE PAGE 76-21)**
 10. **REMOVE DECK TRIM SIDE PANEL ASSY LH (SEE PAGE 76-21)**

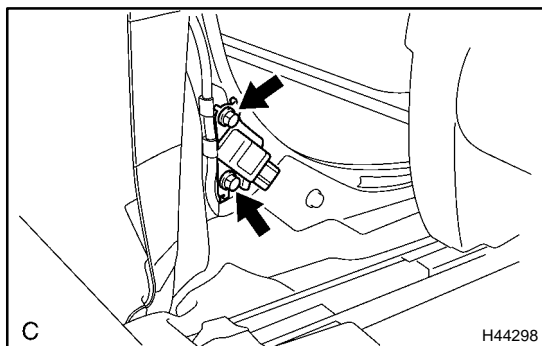

11. REMOVE AIR BAG SENSOR REAR LH

- (a) Disconnect the connector from the airbag sensor rear LH.
- (b) Remove the 2 bolts and the airbag sensor rear LH.

12. INSTALL AIR BAG SENSOR REAR LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor rear LH with the 2 bolts.

Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

NOTICE:

- If the airbag sensor rear LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the airbag sensor rear LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Connect the connector to the airbag sensor rear LH.
 - (e) Check that there is no looseness in the installation parts of the airbag sensor rear LH.
13. **CONNECT BATTERY NEGATIVE TERMINAL**
 14. **INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207)**