


REPLACEMENT

HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
1. **PRECAUTION (SEE PAGE 60-1)**
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)**
 3. **REMOVE REAR DOOR SCUFF PLATE LH (SEE PAGE 76-21)**
 4. **REMOVE FRONT DOOR SCUFF PLATE LH (SEE PAGE 76-21)**
 5. **REMOVE REAR DOOR WEATHERSTRIP LH (SEE PAGE 76-21)**
 6. **REMOVE FRONT DOOR WEATHERSTRIP LH (SEE PAGE 76-21)**
 7. **REMOVE CENTER PILLAR GARNISH LOWER LH (SEE PAGE 76-21)**
 8. **REMOVE FRONT SEAT OUTER BELT ASSY LH (SEE PAGE 61-4)**

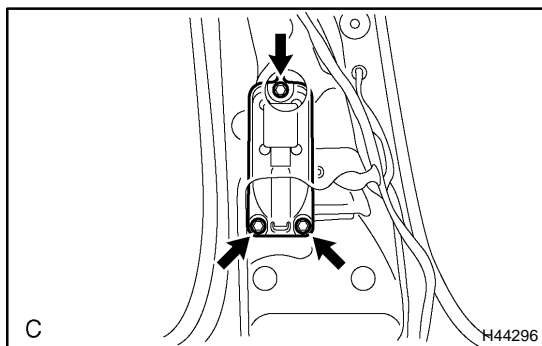

9. REMOVE SIDE AIR BAG SENSOR ASSY LH

- (a) Disconnect the connector from the side airbag sensor assy LH.
- (b) Remove the 3 bolts and the side airbag sensor assy LH.

10. INSTALL SIDE AIR BAG SENSOR ASSY LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the side airbag sensor assy LH with the 3 bolts.

Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)

NOTICE:

- If the side airbag sensor assy LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the side airbag sensor assy LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Connect the connector to the side airbag sensor assy LH.
 - (e) Check that there is no looseness in the installation parts of the side airbag sensor assy LH.

11. CONNECT BATTERY NEGATIVE TERMINAL

12. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1207)